

MULTIFUNCTION TAPS > QUATREAU COLLECTION

QUATREAU TOUCH & SMARTTAP SYSTEMS INTEGRATION

—*Pre installation check list*




Call 01483 617000 to book an installation
or find out more at pureh2o.co.uk

MADE
IN GREAT
BRITAIN 

1. Correct sized hole drilled in worktop i.e. 40mm
2. Mains Cold Water: 1/2" lever ball valve, located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
3. Thermostatic Valve to be installed so that it is accessible for adjustment on the same side of the cupboard as the mains cold water supply. Note that this is in addition to the isolated Mains Cold Water that will be used to feed a cold supply to the system.
4. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
5. Power: Site a double socket on the left hand side of cupboard wall above 50cm from base and set back approximately 15cm from the front.

—with Pureh2o PurityPRO undersink purifier

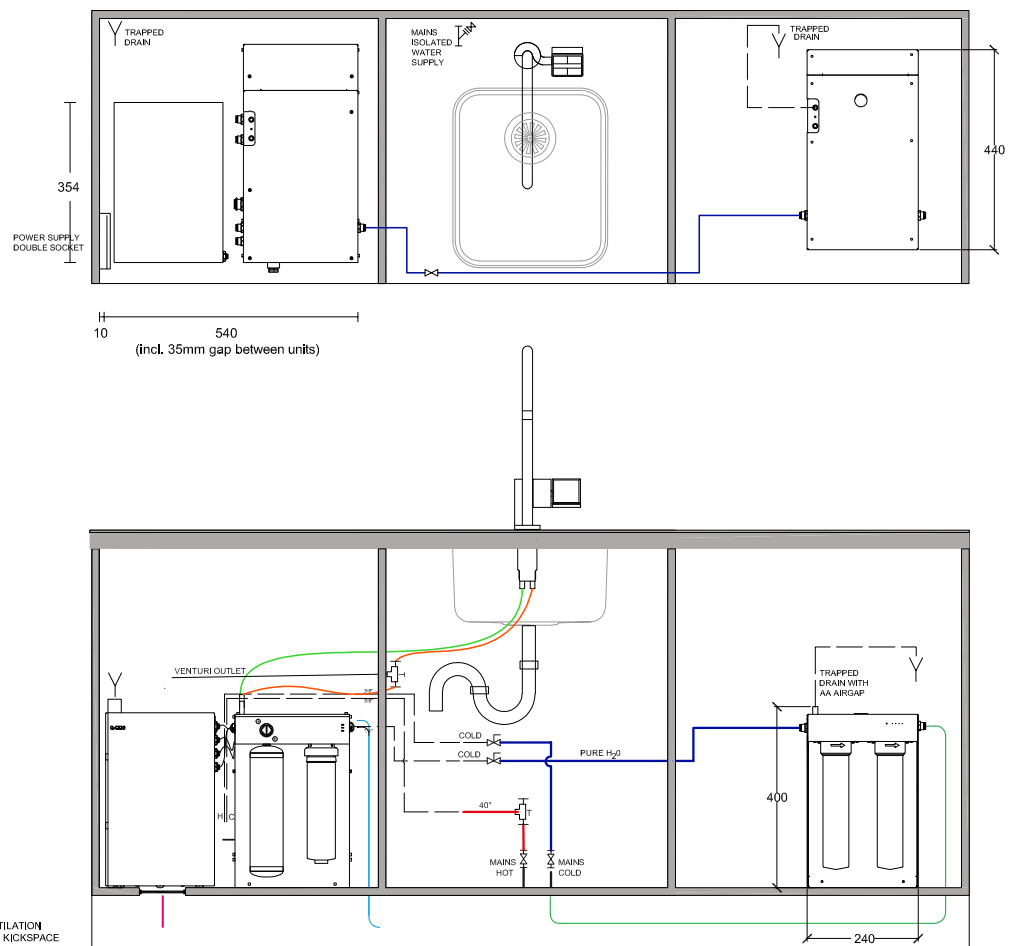

QT553-B/BC/BCS

—Pre installation check list


quatreaux[®]
Touch

FOR ALL UNITS

1. Correct sized hole drilled in worktop i.e. 40mm
2. Mains Cold Water: 1/2" lever ball valve, located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
3. Thermostatic Valve to be installed so that it is accessible for adjustment on the same side of the cupboard as the mains cold water supply. Note that this is in addition to the isolated Mains Cold Water that will be used to feed a cold supply to the system.
4. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
5. Power: Site a double socket on the left hand side of cupboard wall above 50cm from base and set back approximately 15cm from the front.


TYPICAL INSTALLATION

— without Pureh2o PurityPRO undersink purifier

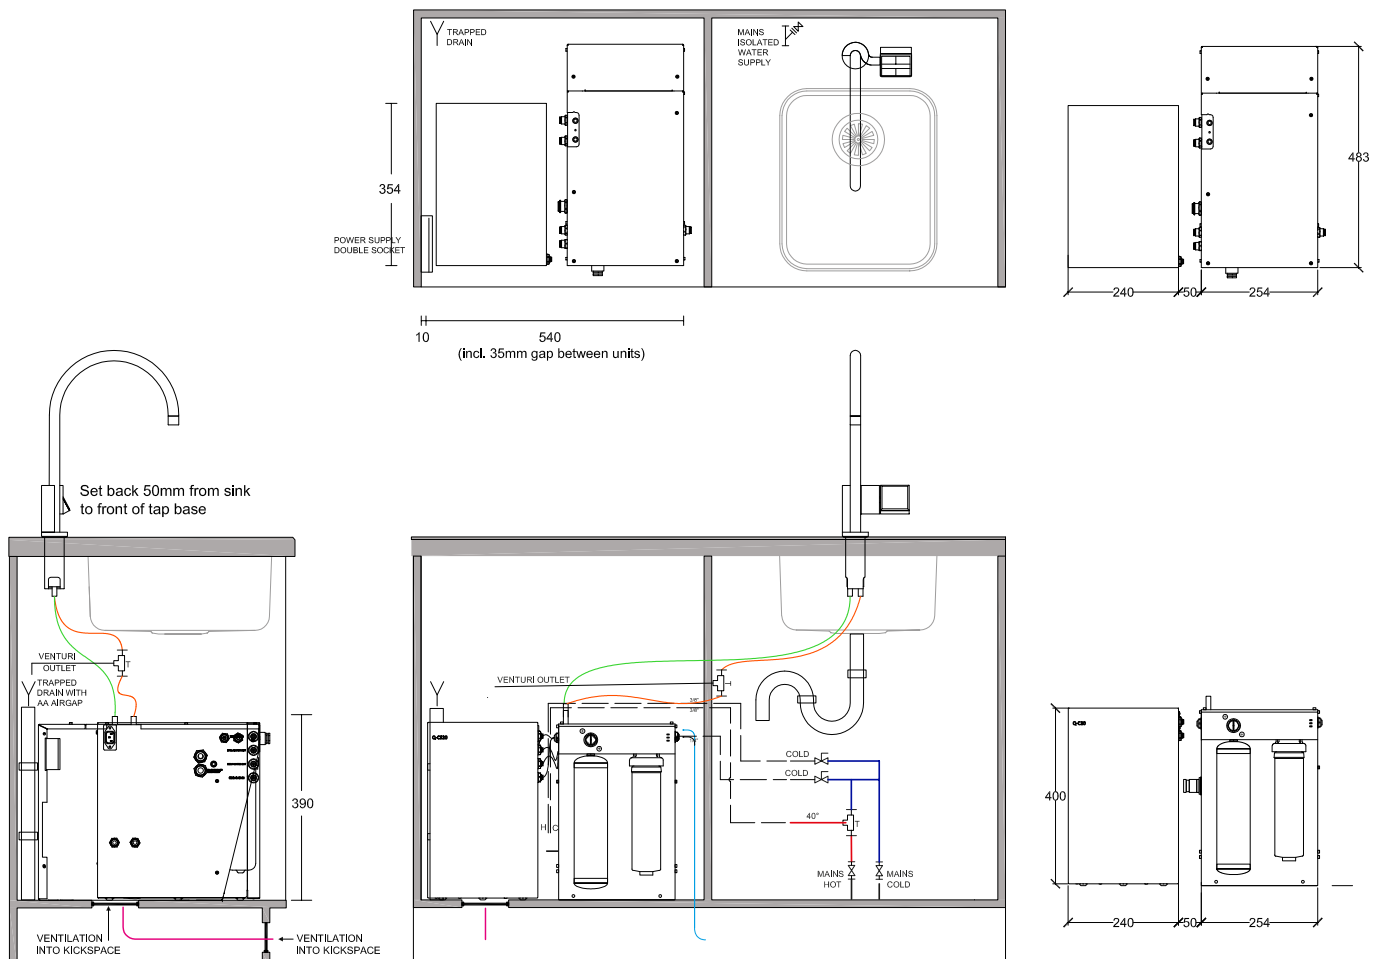

QT553-B/BC/BCS

—Pre installation check list

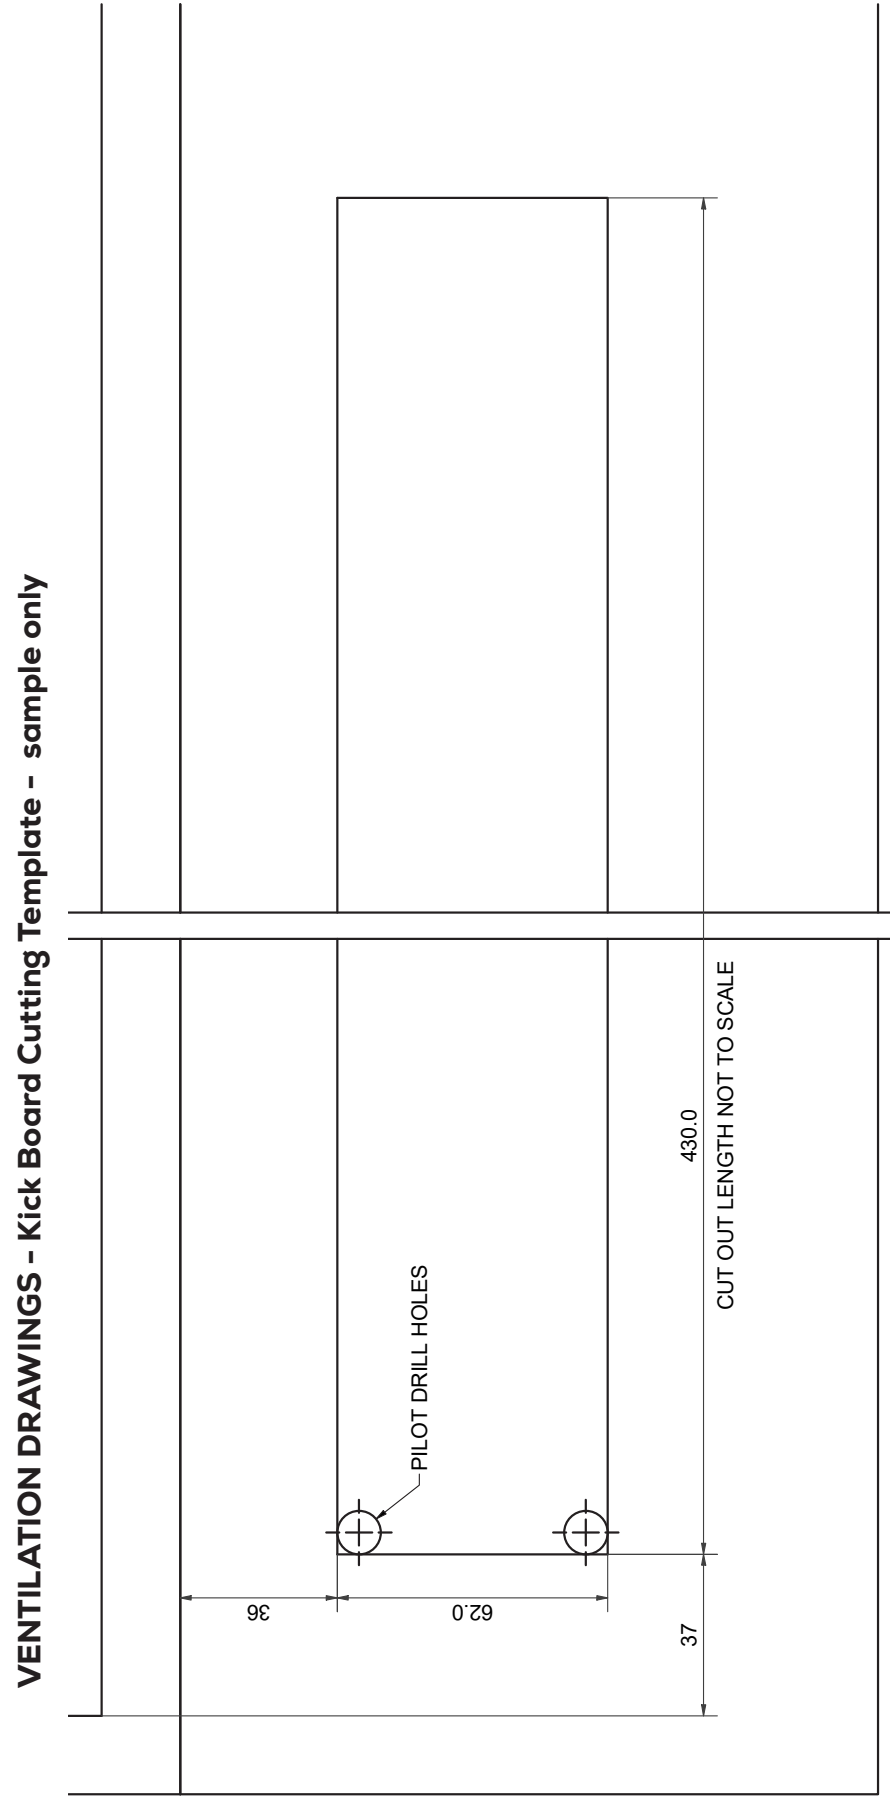

Mark and cut ducting to length if required using the kick board as reference.

Fit grill over the kick board cut out using the screws supplied.

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3

0mm 150mm

Use for: Q-C20, Q-CS20, Q-C50, Q-CS50


3B7698-01 KICK-BOARD CUTTING TEMPLATE.

QT553-B/BC/BCS

—Pre installation check list




VENTILATION DRAWINGS - Base Cutting Template - sample only

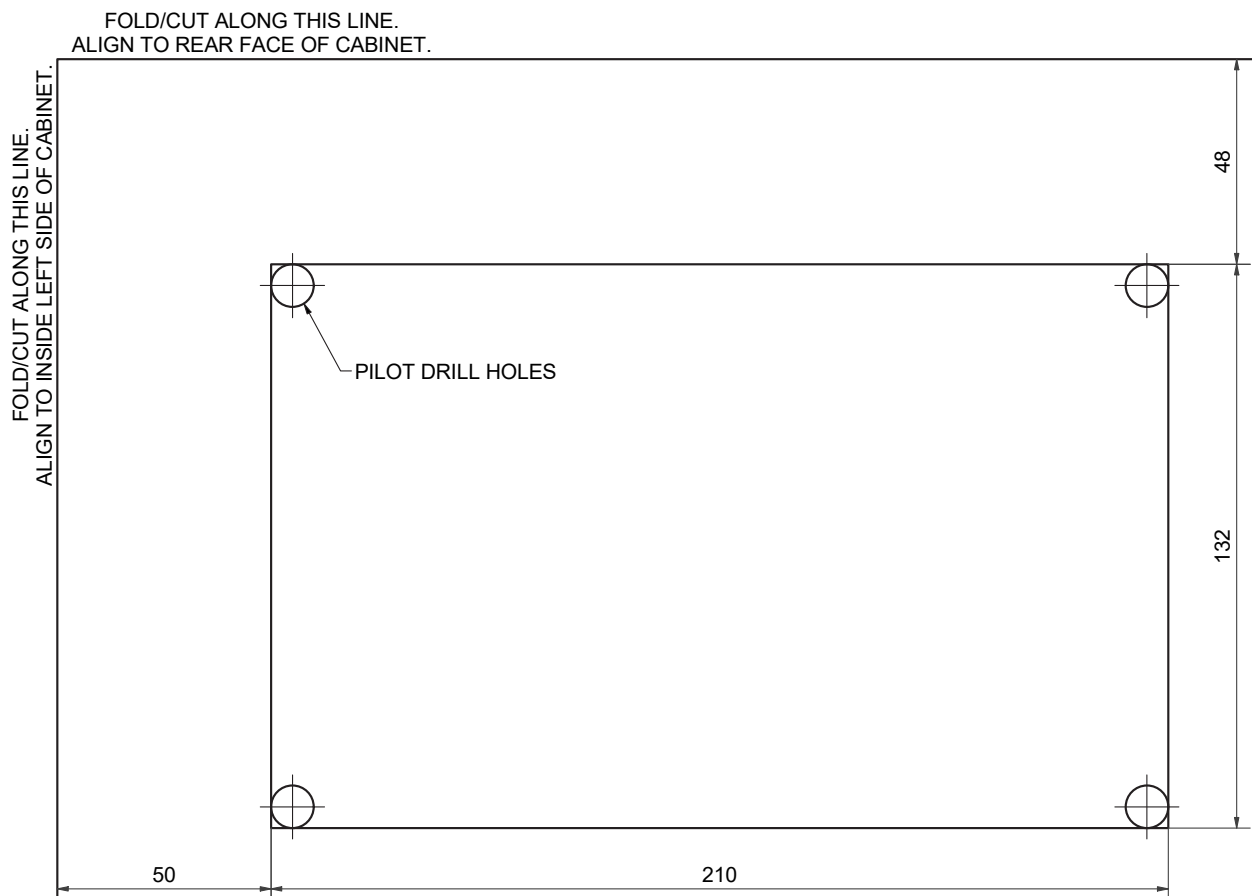

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3

Use for: Q-C20, Q-CS20

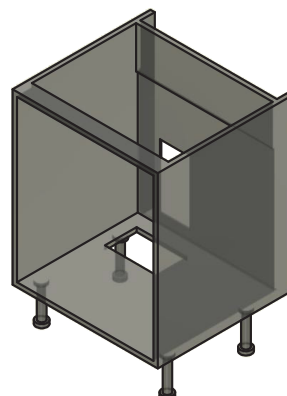

QT553-B/BC/BCS

—Pre installation check list

quatreaux[®]
Touch

EXTENSION VENT CABINET DRAWINGS - Cutting Template

- sample only - not reproduced to scale

ALL DIMENSIONS IN mm

TOLERANCES


0.0 ` 0.25, 0.00 ` 0.1

ANGULAR ` 0.25~

BEND ANGLES ` 2~

ALL OTHERS DIMNS ` 0.5

UNLESS OTHERWISE STATED

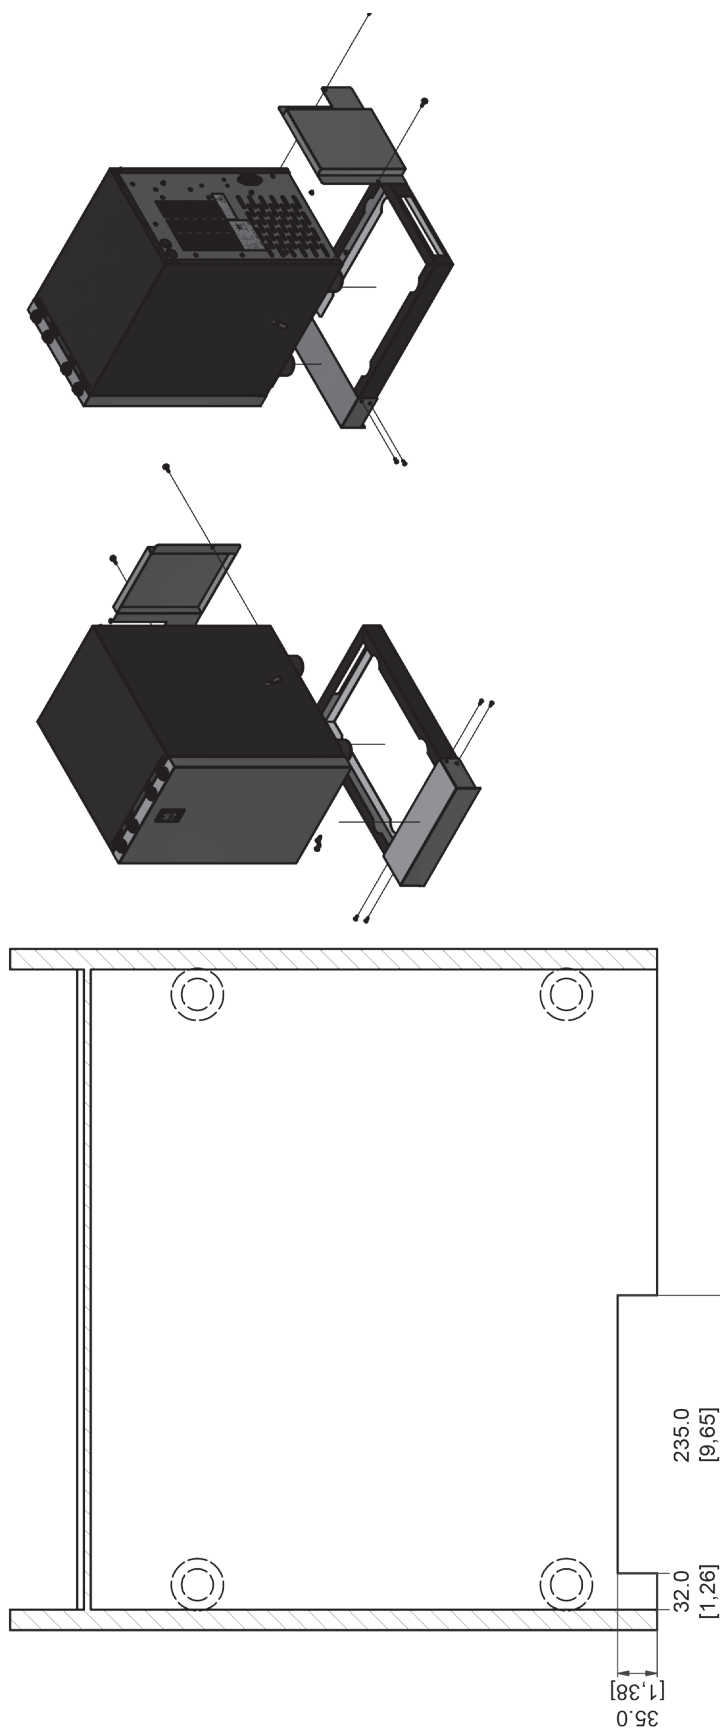

QSTD-553-B/BC/BCS

—Pre installation check list



FOR ALL QUATREAU SMARTTAPS

1. Mains Cold Water: ½" lever ball valve located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
2. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
3. Power: Site a double socket on the left hand side of cupboard wall above 50cm from base and set back approximately 15cm from the front.


WITH INTEGRATED DRAINER

1. SmartTap with integrated drainer must be templated using the template provided by Pureh2o.
2. The integrated drainer comes as standard with controls to the right hand side of the drainer. The spout will be located at the back right hand side.
3. If using a separate chiller or chiller/ carbonator second power socket is provided at point of install.



TYPICAL INSTALLATION

—with Pureh2o PurityPRO undersink purifier

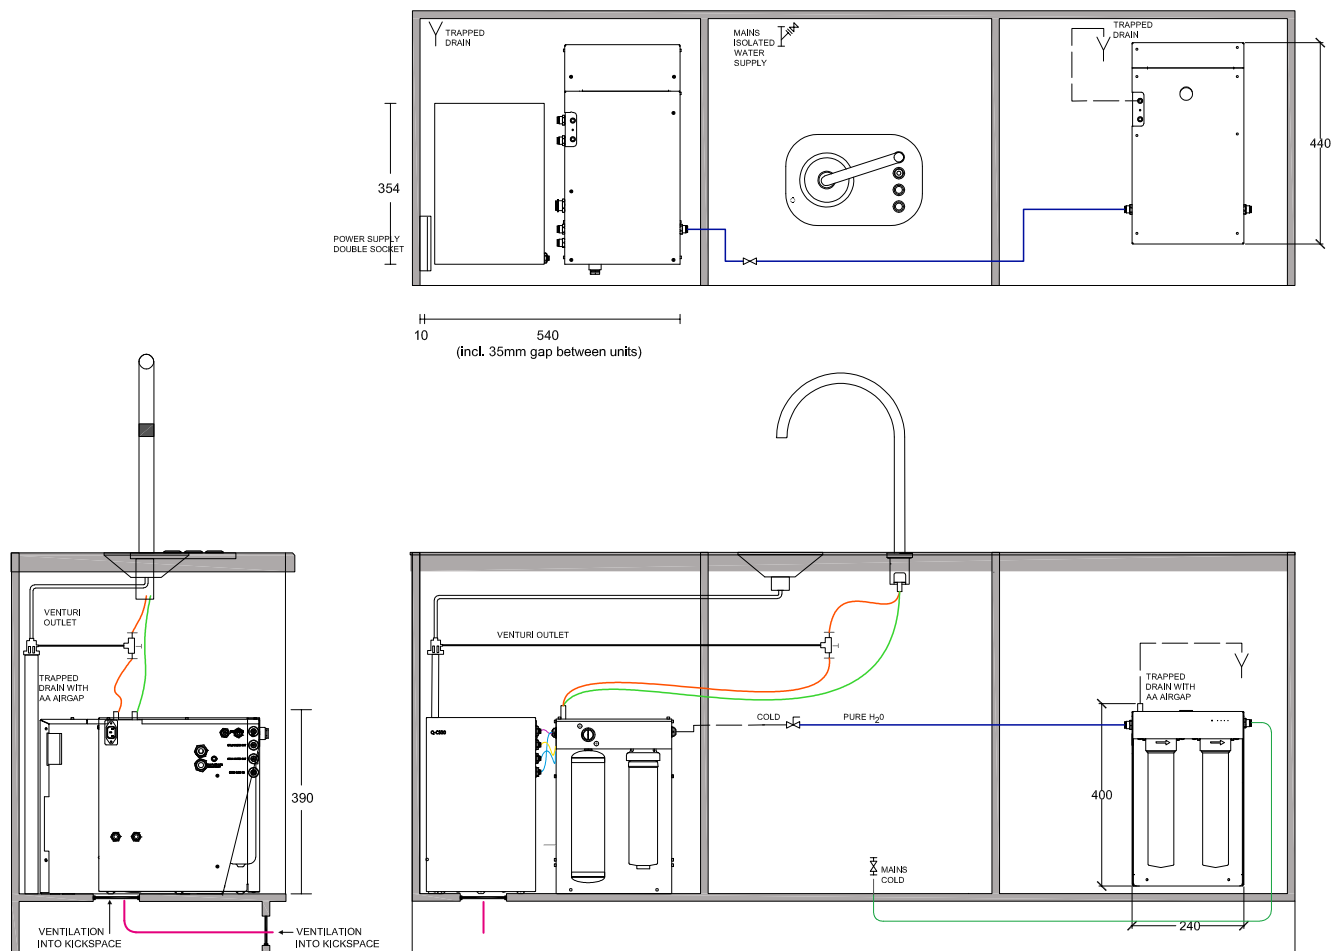

QSTD-553-B/BC/BCS

—Pre installation check list



FOR ALL QUATREAU SMARTTAPS

1. Mains Cold Water: ½" lever ball valve located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
2. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
3. Power: Site a double socket on the left hand side of cupboard wall above 50cm from base and set back approximately 15cm from the front.




WITH INTEGRATED DRAINER

1. SmartTap with integrated drainer must be templated using the template provided by Pureh2o.
2. The integrated drainer comes as standard with controls to the right hand side of the drainer. The spout will be located at the back right hand side.
3. If using a separate chiller or chiller/ carbonator second power socket is provided at point of install.



TYPICAL INSTALLATION

—without Pureh2o PurityPRO undersink purifier

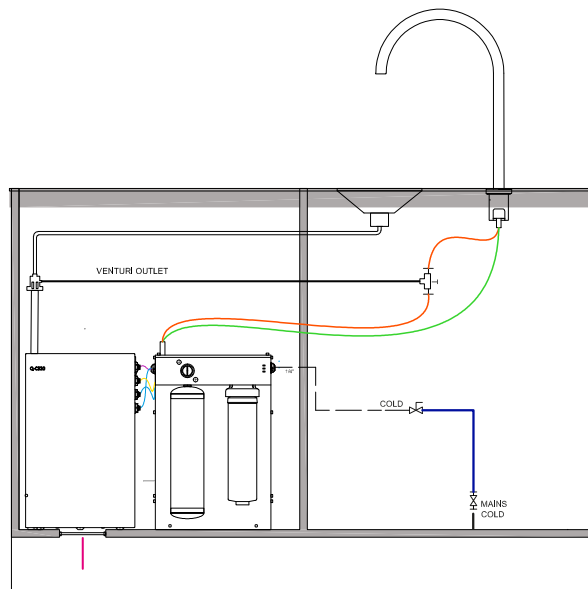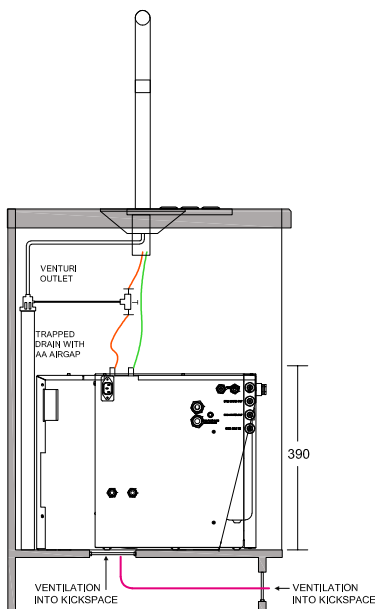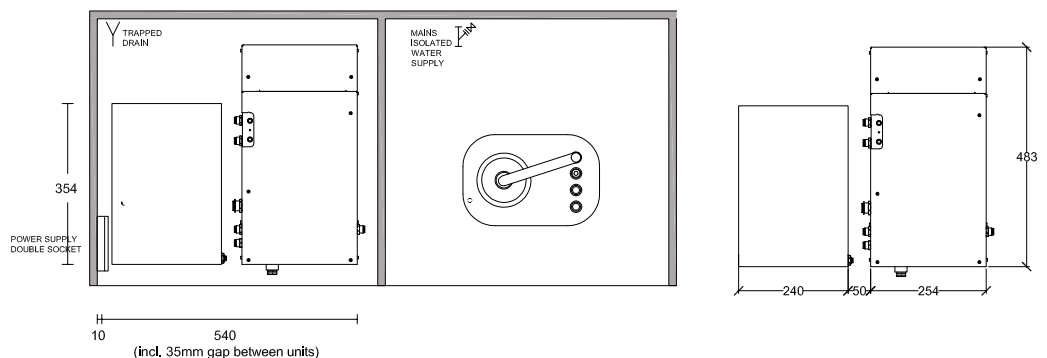

Technical drawing of a mechanical part showing four views: Front, Back, Left, and Right. The part has a rectangular base with a semi-circular end on the right.

Front View (FRONT ↓): Shows the overall dimensions: total width 300, total height 200, and a semi-circular end with radius R70. A large circular feature with diameter $\phi 150$ is centered on the left. A vertical dimension of 100 is shown from the bottom to the center of the large circle.

Back View (BACK ↑): Shows the back of the part. It features four circular holes arranged vertically. The top hole is labeled "4 HOLES 31.0". The distance from the top hole to the center of the large circle is 158.32. The distance from the center of the large circle to the bottom hole is 210. The distance from the bottom hole to the right edge is 51.68. The distance from the top hole to the right edge is 150. The distance from the top hole to the center of the large circle is 70. The distance from the center of the large circle to the right edge is 35. The distance from the bottom hole to the right edge is 35.

Left View (LEFT ↑): Shows the left side of the part. It features a large circular feature with diameter $\phi 150$ centered on the left. A vertical dimension of 100 is shown from the bottom to the center of the large circle.


Right View (RIGHT ↑): Shows the right side of the part. It features a semi-circular end with radius R70. The distance from the top hole to the right edge is 150. The distance from the center of the large circle to the right edge is 35. The distance from the bottom hole to the right edge is 35.

QSTD-553-BC/CS

—Pre installation check list


quatreau[®]
SmartTap

CUTTING TEMPLATE - SAMPLE ONLY

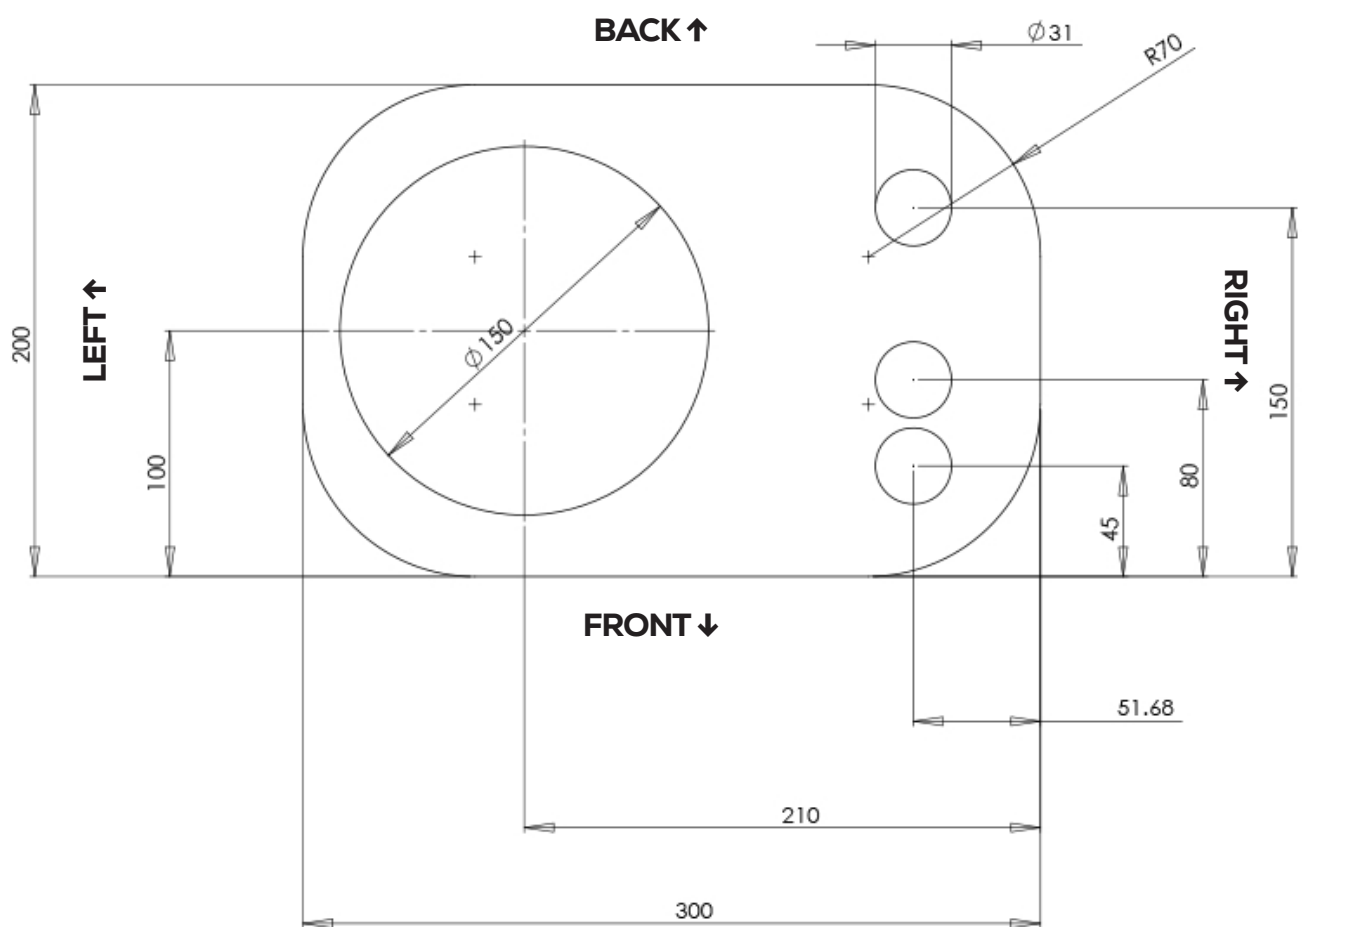

NOTES:

Unless otherwise specified all dimensions are in mm



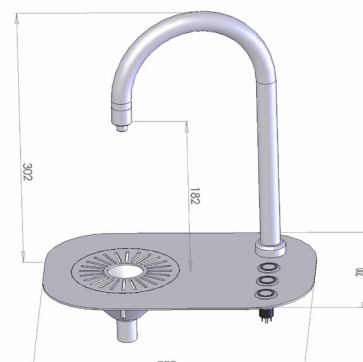


QSTD-553-B/BC/BCS

—Pre installation check list



VENTILATION DRAWINGS - Kick Board Cutting Template - sample only

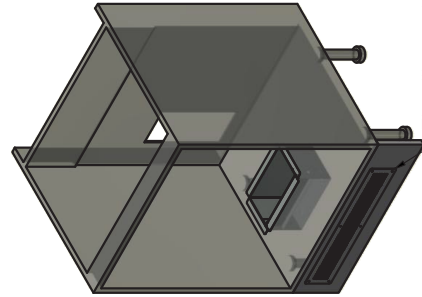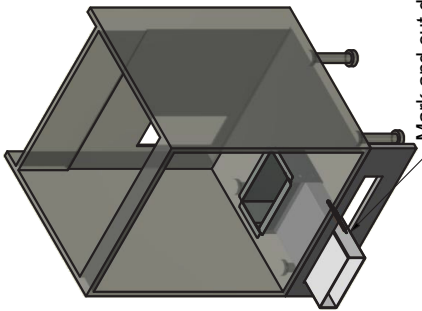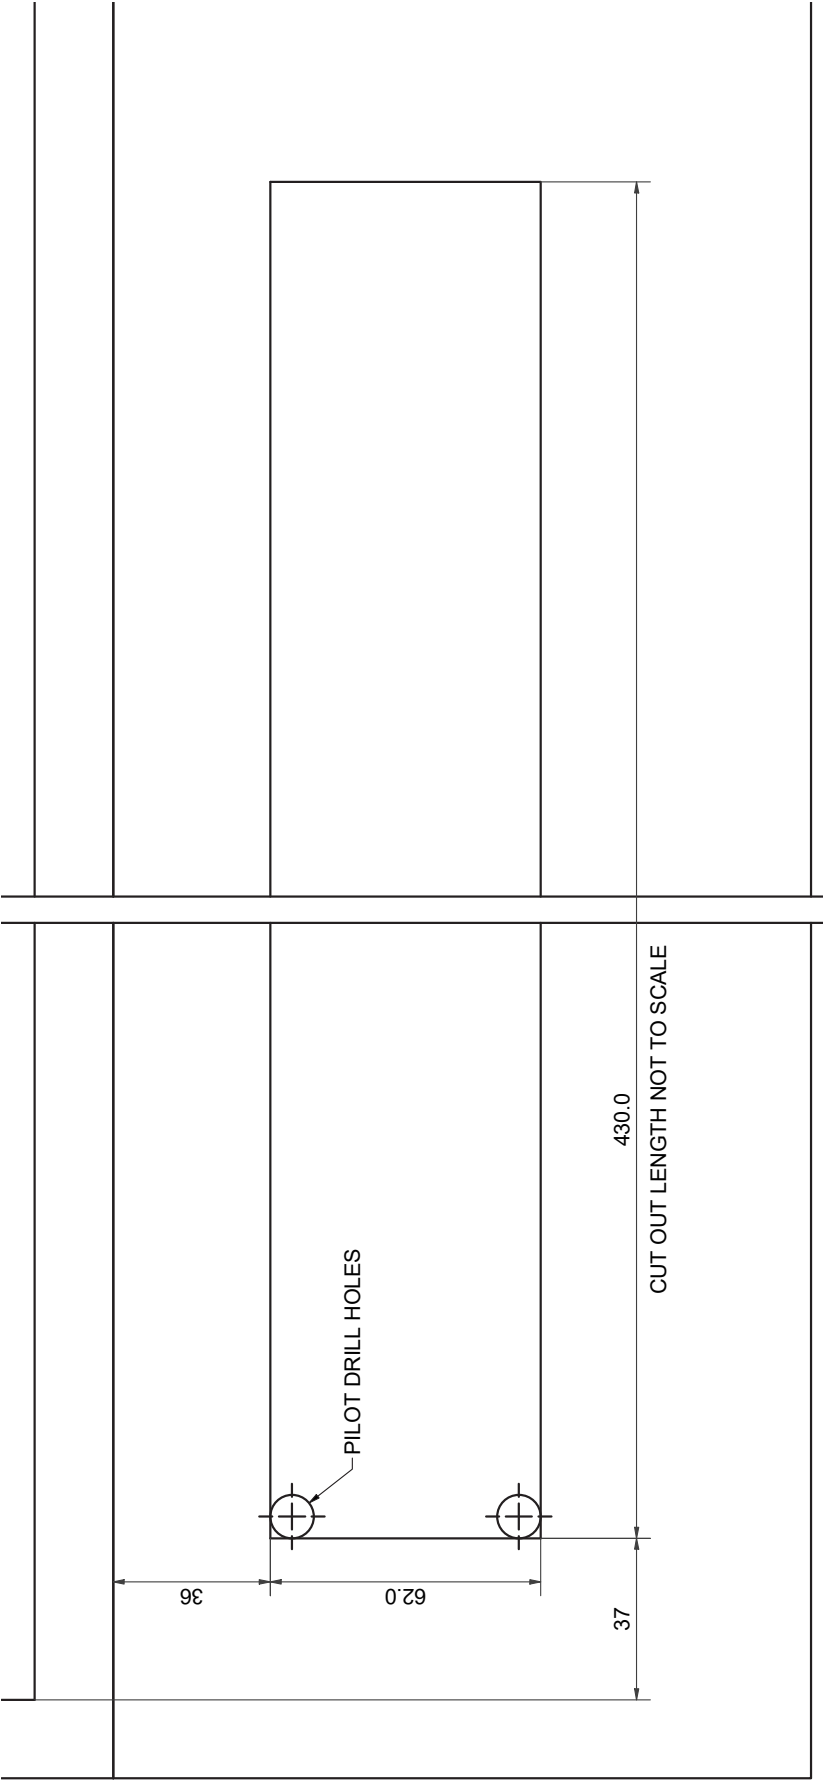

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3




Use for: Q-C20, Q-CS20, Q-C50, Q-CS50

3B7698-01 KICK-BOARD CUTTING TEMPLATE.

QSTD-553-B/BC/BCS

—Pre installation check list


VENTILATION DRAWINGS - Base Cutting Template - sample only

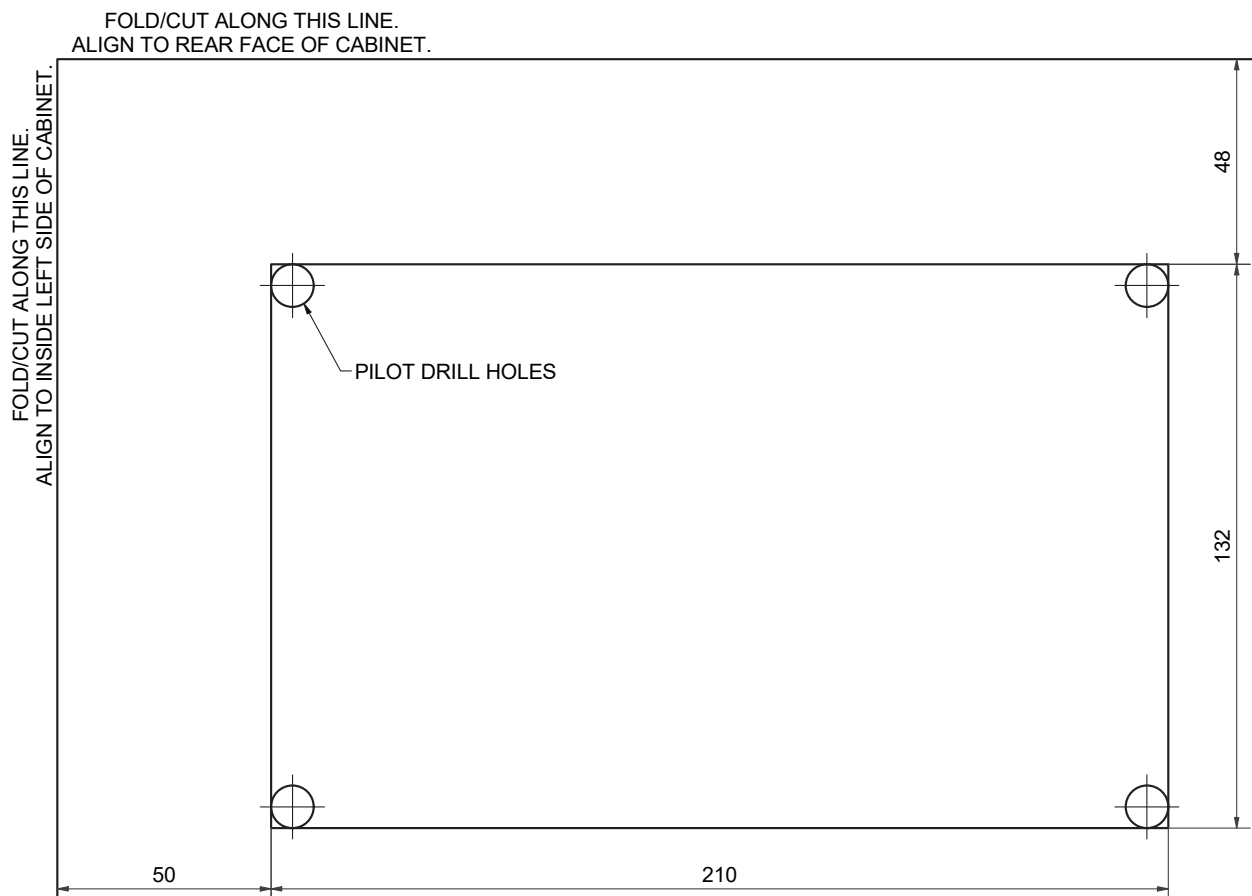

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3

Use for: Q-C20, Q-CS20

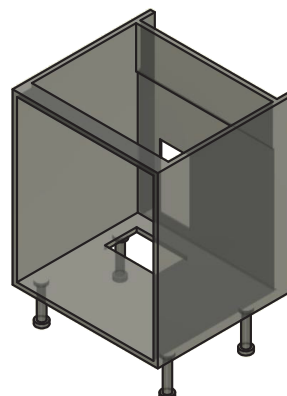

QSTD-553-B/BC/BCS

—Pre installation check list

EXTENSION VENT CABINET DRAWINGS - Cutting Template

- sample only - not reproduced to scale

ALL DIMENSIONS IN mm

TOLERANCES


0.0 ` 0.25, 0.00 ` 0.1

ANGULAR ` 0.25~

BEND ANGLES ` 2~

ALL OTHERS DIMNS ` 0.5

UNLESS OTHERWISE STATED

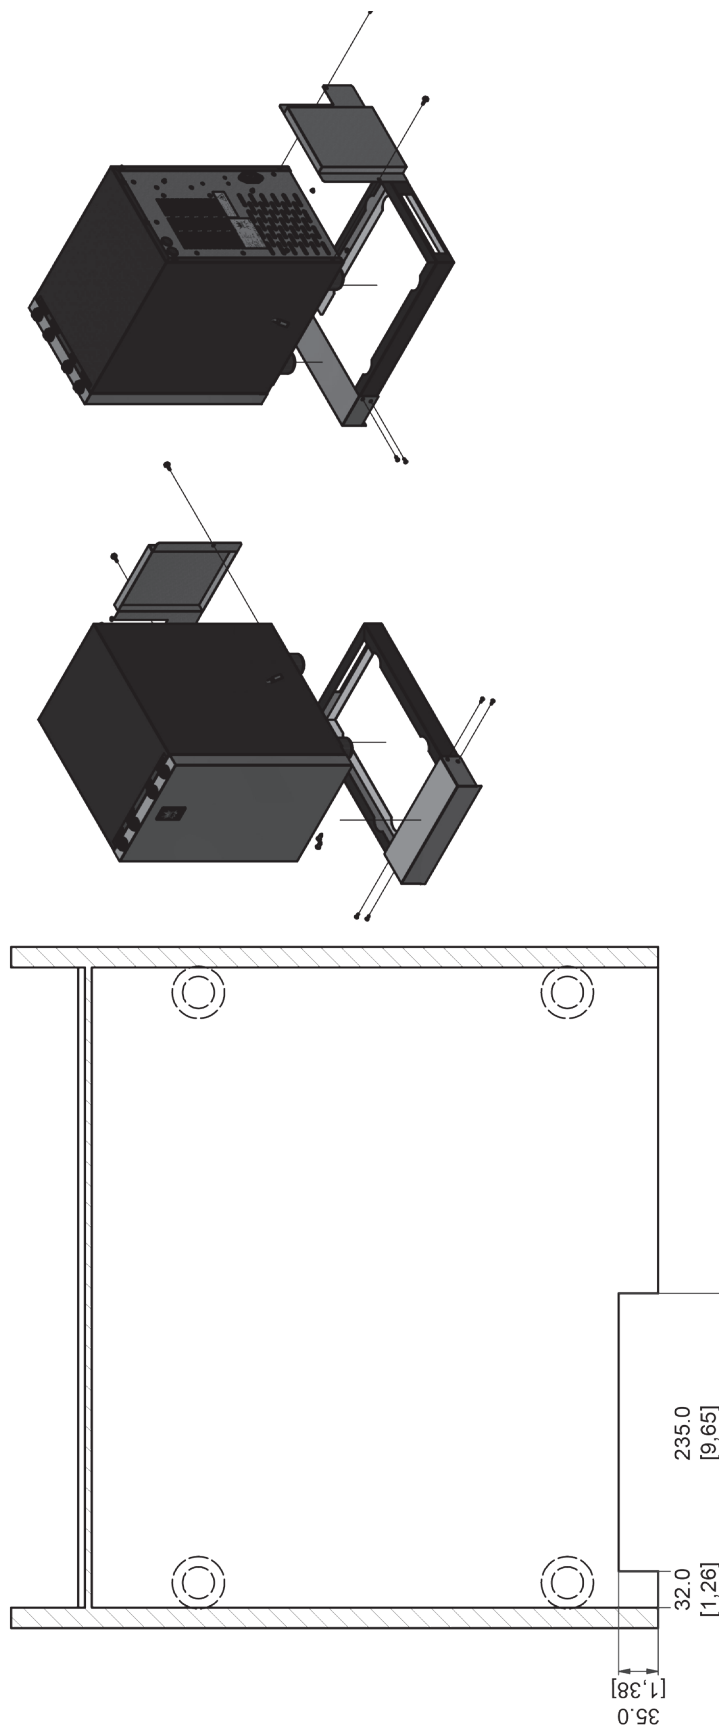

QST-553-B/BC/BCS

—Pre installation check list



FOR ALL QUATREAU SMARTTAPS




1. Mains Cold Water: ½" lever ball valve located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
2. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
3. Power: Site a double socket on the left hand side of cupboard wall above 50cm from base and set back approximately 15cm from the front.

STAND-ALONE SMARTTAP

1. Standalone SmartTap must be templated using the template provided by Pureh2o.
2. The standalone SmartTap is designed to sit along side a sink. The template can be used on the left or right hand side of the sink. The spout will always sit at the back of the sink with the controls to the front.
3. Kickboard can be easily removed for installation and service work.



TYPICAL INSTALLATION

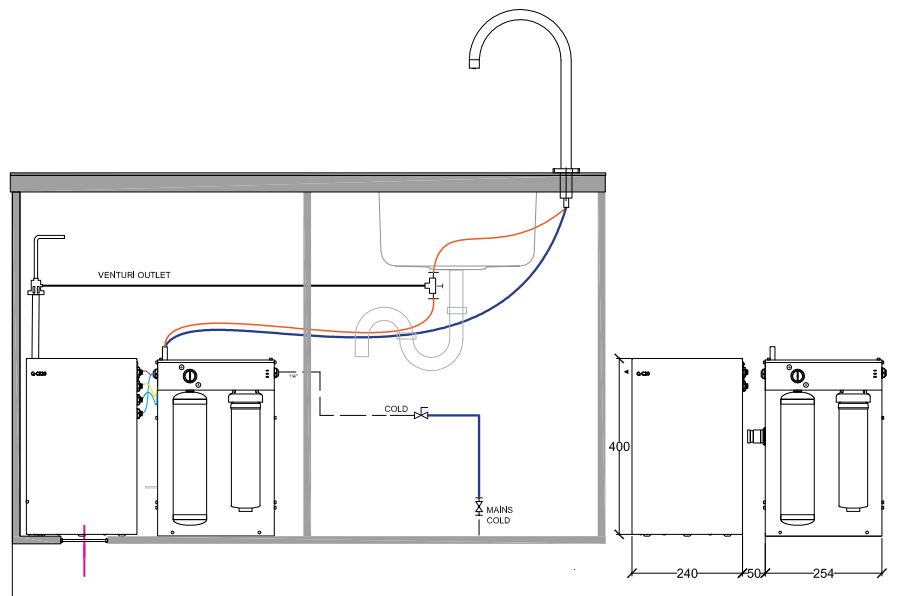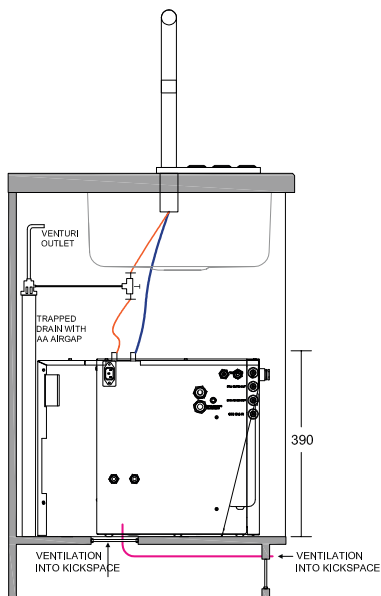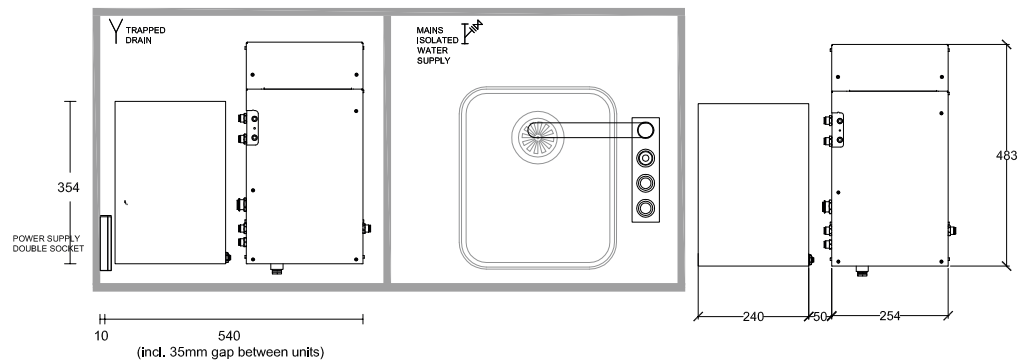


QST-553-B/BC/BCS

—Pre installation check list



CUTTING TEMPLATE FOR 2 BUTTON MODEL - SAMPLE ONLY

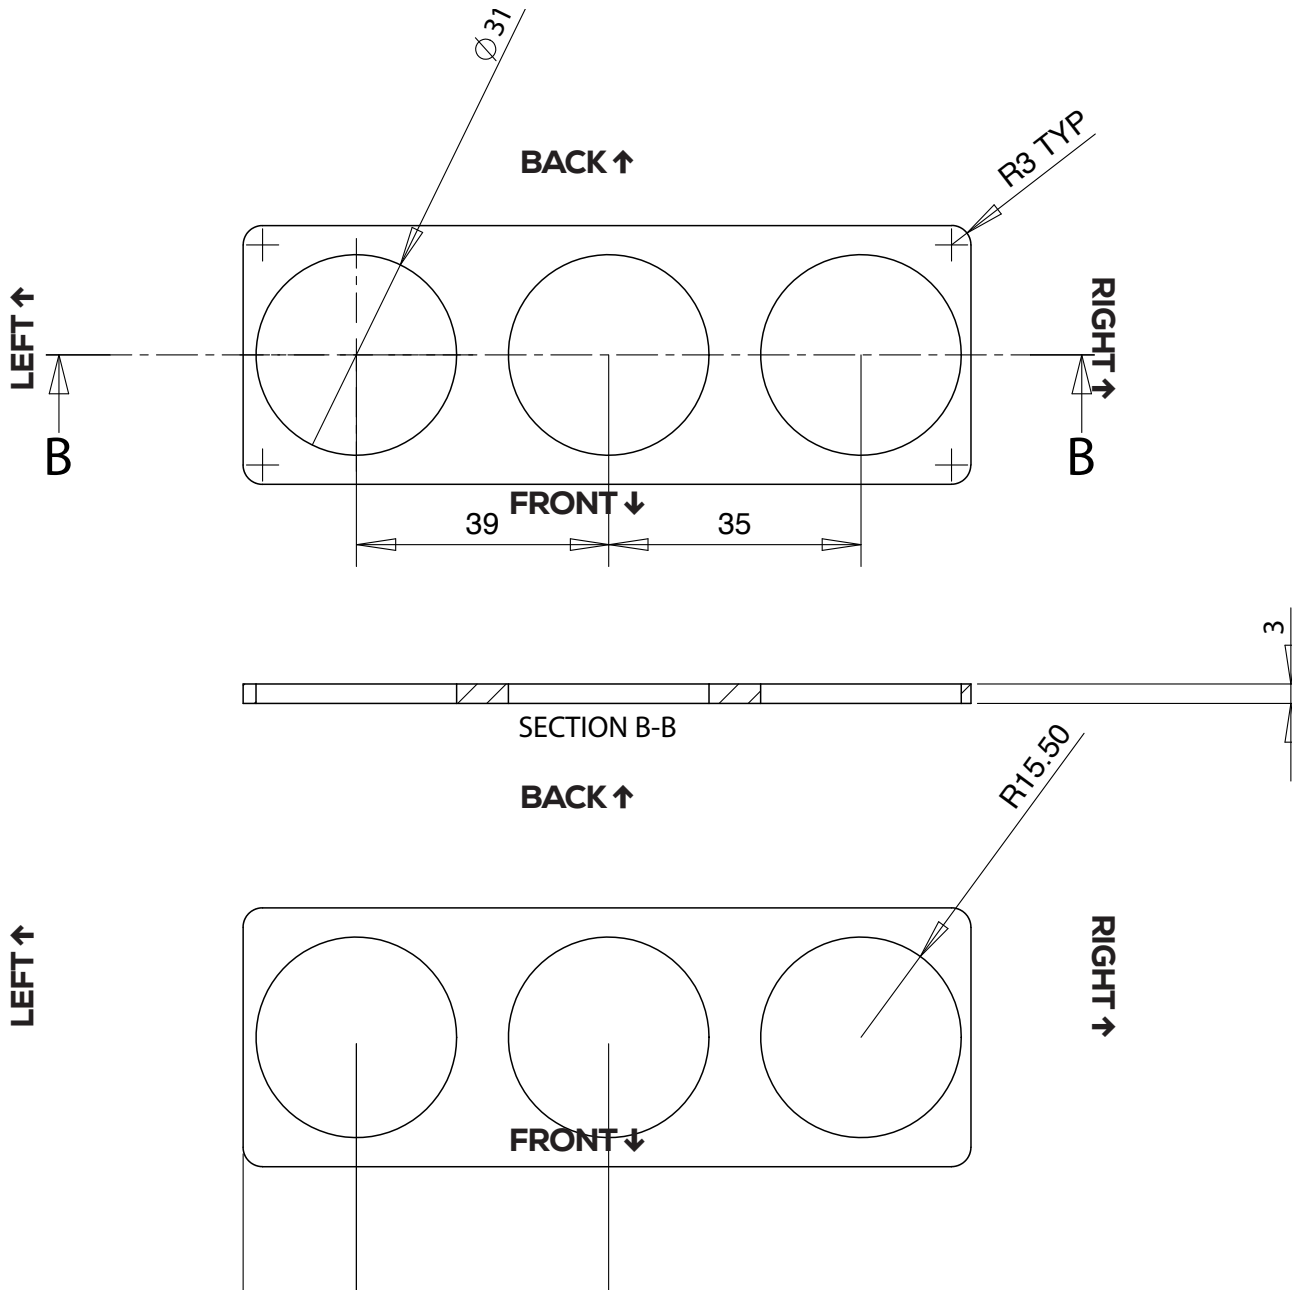

NOTES:


Unless otherwise specified all dimensions are in mm

QST-553-B/BC/BCS

—Pre installation check list



CUTTING TEMPLATE FOR 3 BUTTON MODEL - SAMPLE ONLY

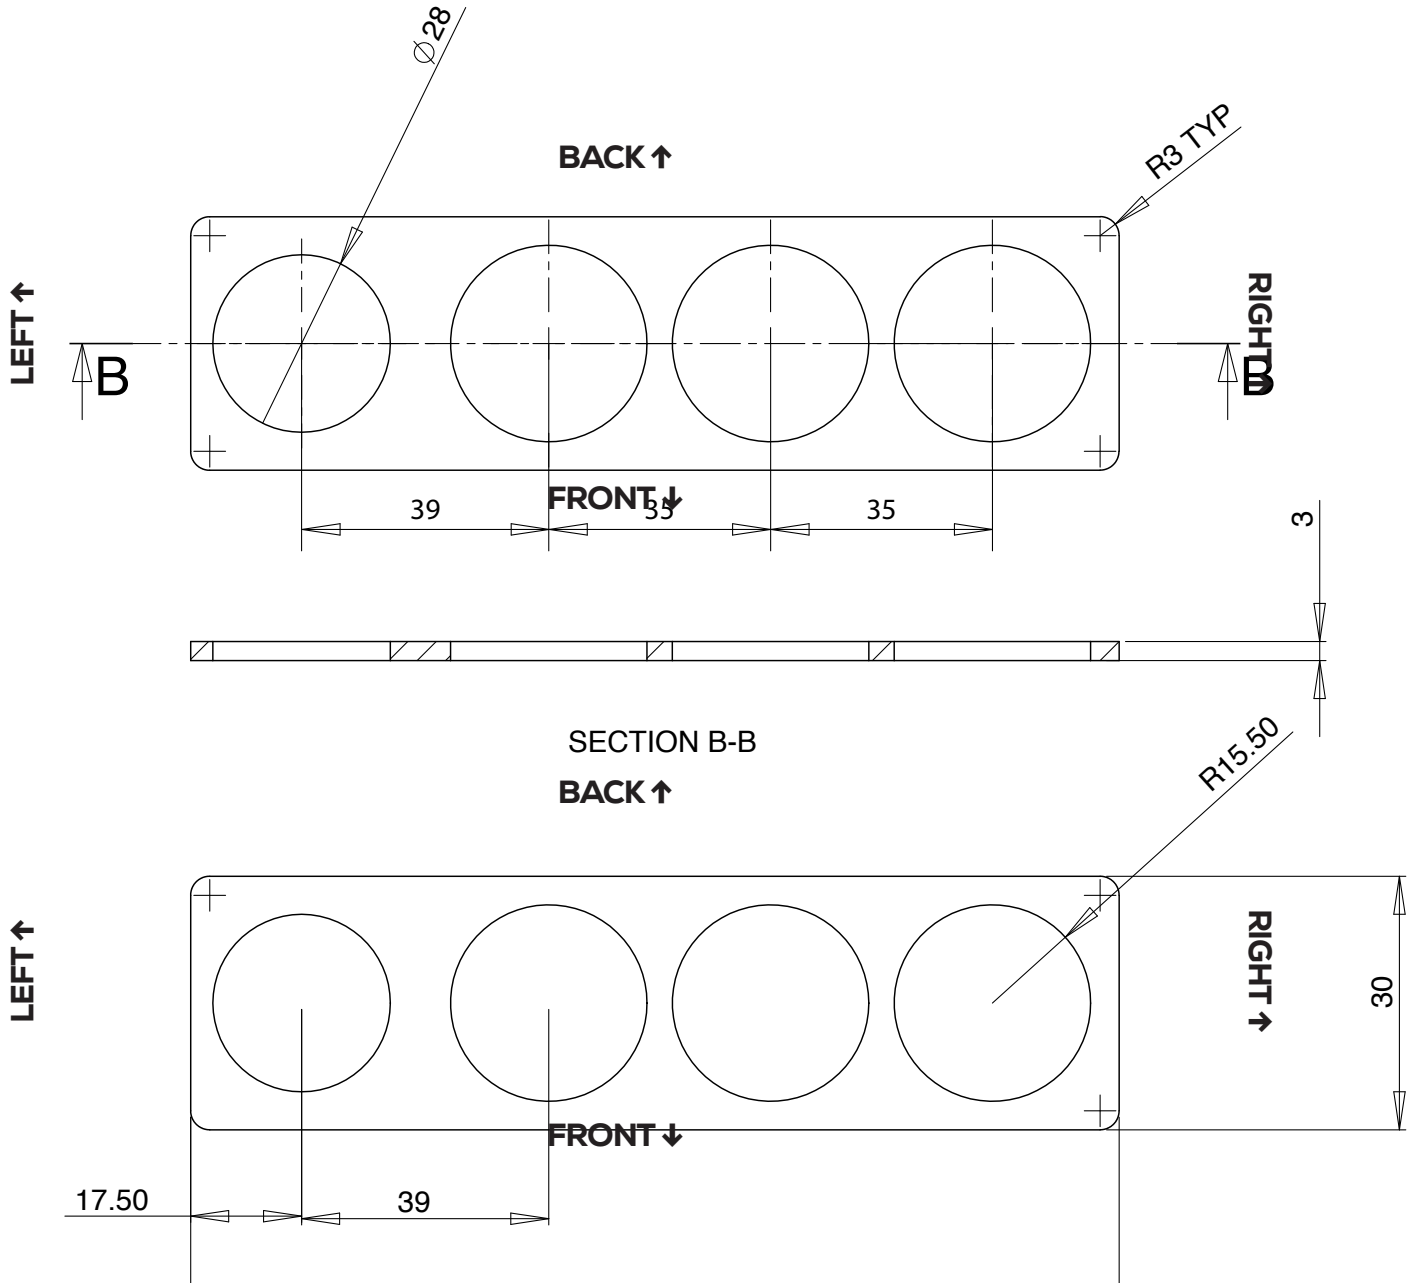

NOTES:


Unless otherwise specified all dimensions are in mm


QST-553-B/BC/BCS

—Pre installation check list




VENTILATION DRAWINGS - Kick Board Cutting Template - sample only

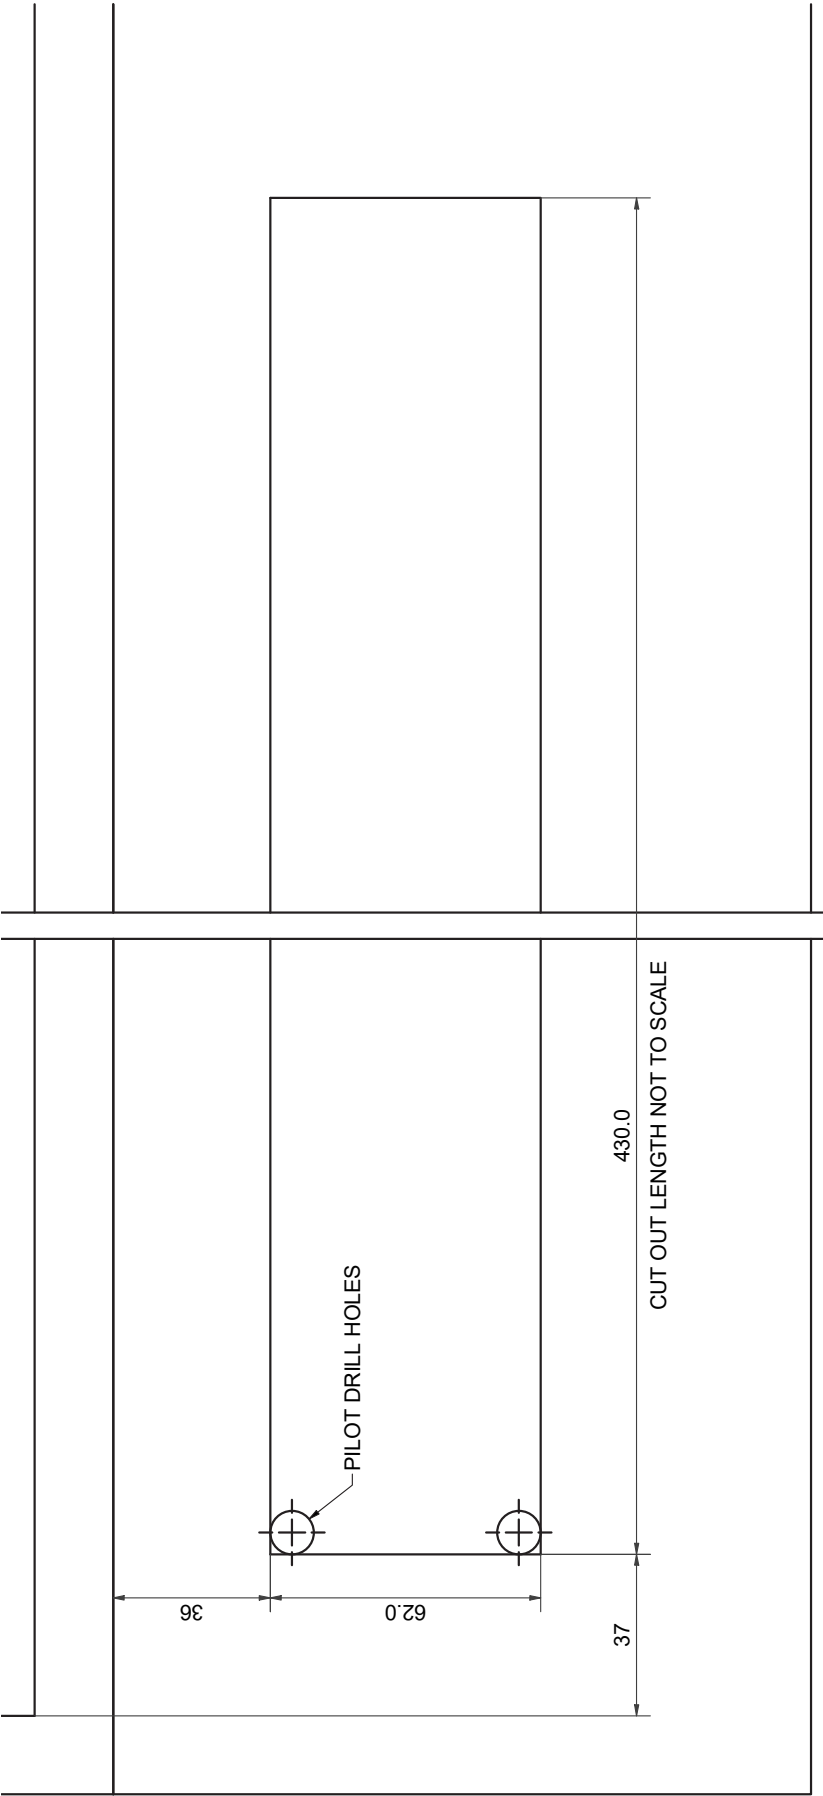

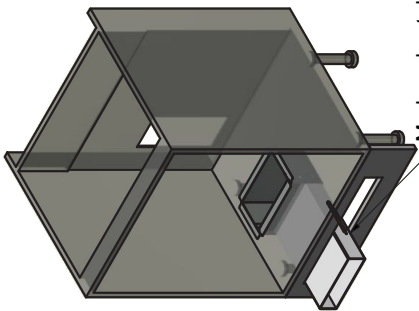

Mark and cut ducting to length if required using the kick board as reference.

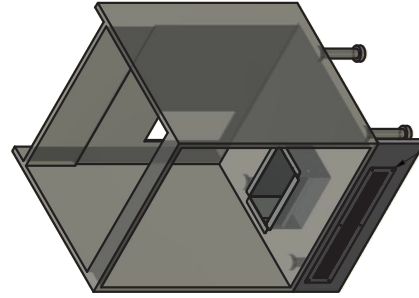

Fit grill over the kick board cut out using the screws supplied.

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3

0mm 150mm


Use for: Q-C20, Q-CS20, Q-C50, Q-CS50

3B7698-01 KICK-BOARD CUTTING TEMPLATE.

QST-553-B/BC/BCS

—Pre installation check list


VENTILATION DRAWINGS - Base Cutting Template - sample only

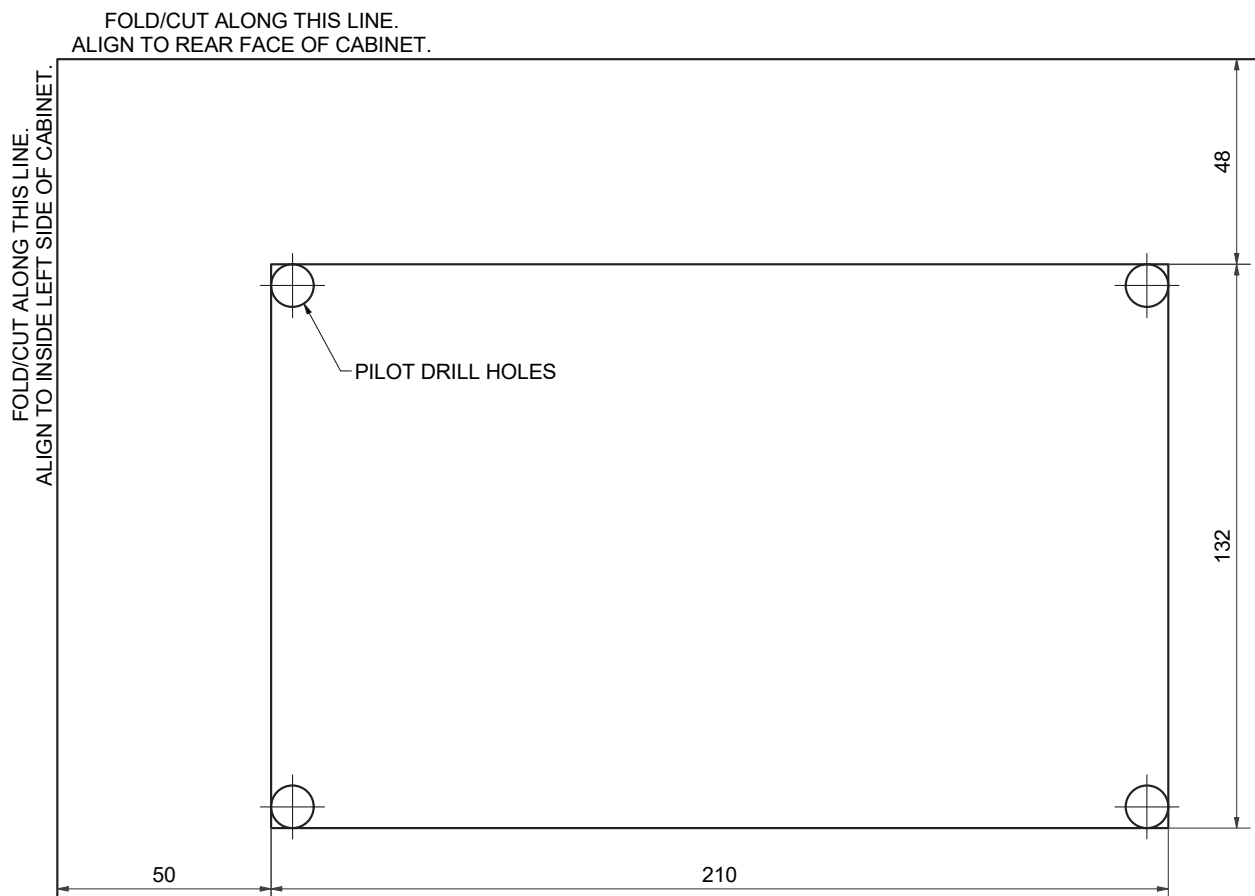

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3

Use for: Q-C20, Q-CS20

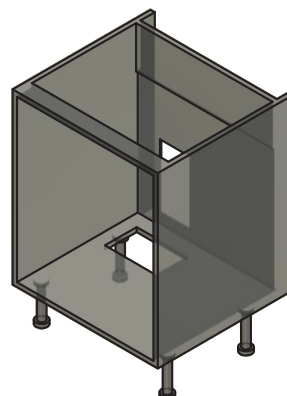


QST-553-B/BC/BCS

—Pre installation check list

EXTENSION VENT CABINET DRAWINGS - Cutting Template

- sample only - not reproduced to scale

ALL DIMENSIONS IN mm
TOLERANCES
0.0 ` 0.25, 0.00 ` 0.1
ANGULAR ` 0.25~
BEND ANGLES ` 2~
ALL OTHERS DIMNS ` 0.5
UNLESS OTHERWISE STATED

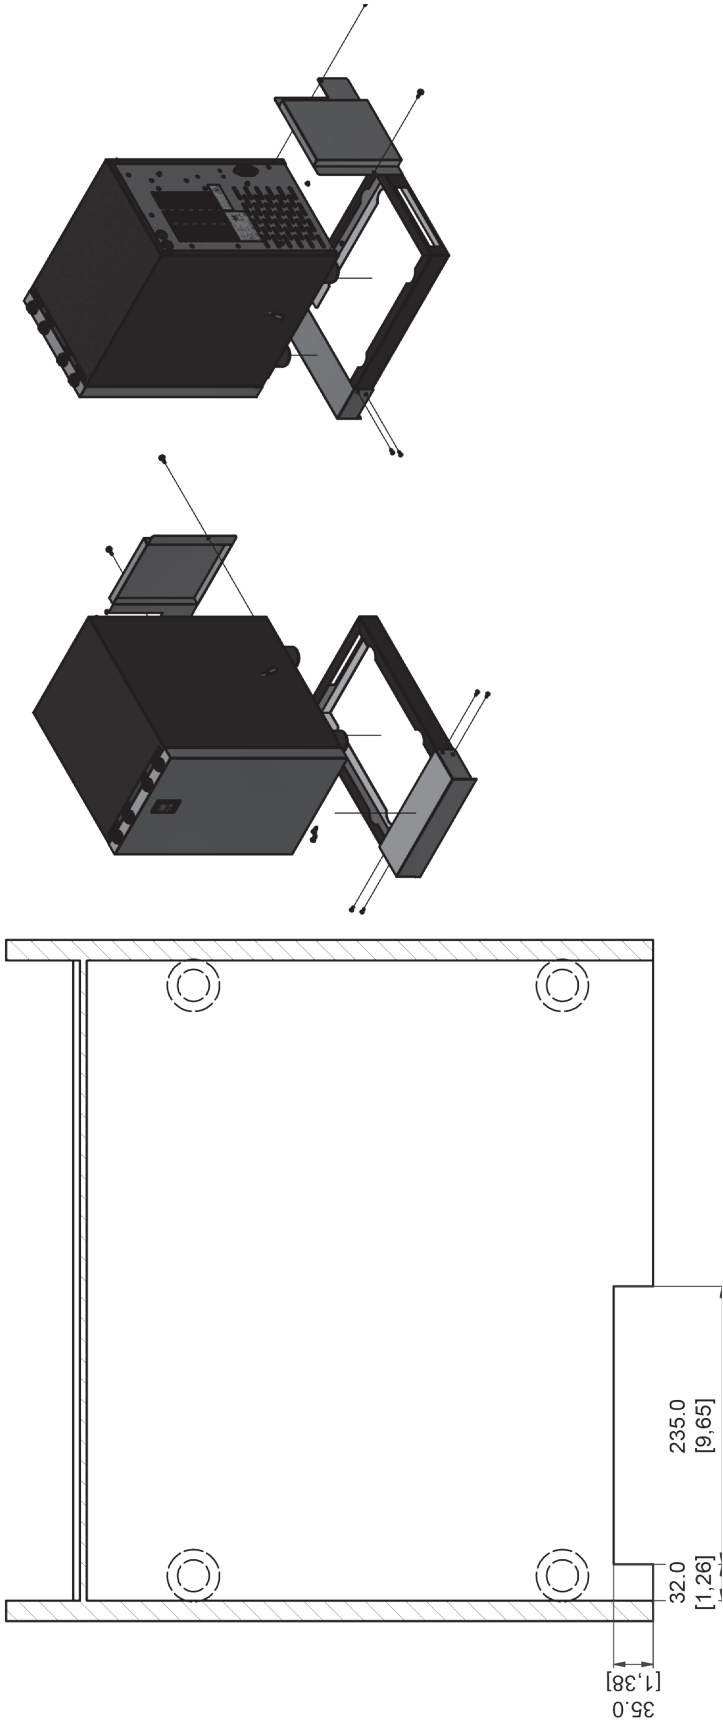

QT-653-B/BC/BCS


—Pre installation check list

FOR ALL UNITS

1. Mains Cold Water: 1/2" lever ball valve, located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
2. Thermostatic Valve to be installed so that it is accessible for adjustment on the same side of the cupboard as the mains cold water supply. Note that this is in addition to the isolated Mains Cold Water that will be used to feed a cold supply to the system.
3. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
4. Power: 2 x Double sockets installed top of the cupboards opposite side to mains water. 653 Infinite boiler unit comes with two power cables.

TYPICAL INSTALLATION

—with Pureh2o PurityPRO undersink purifier

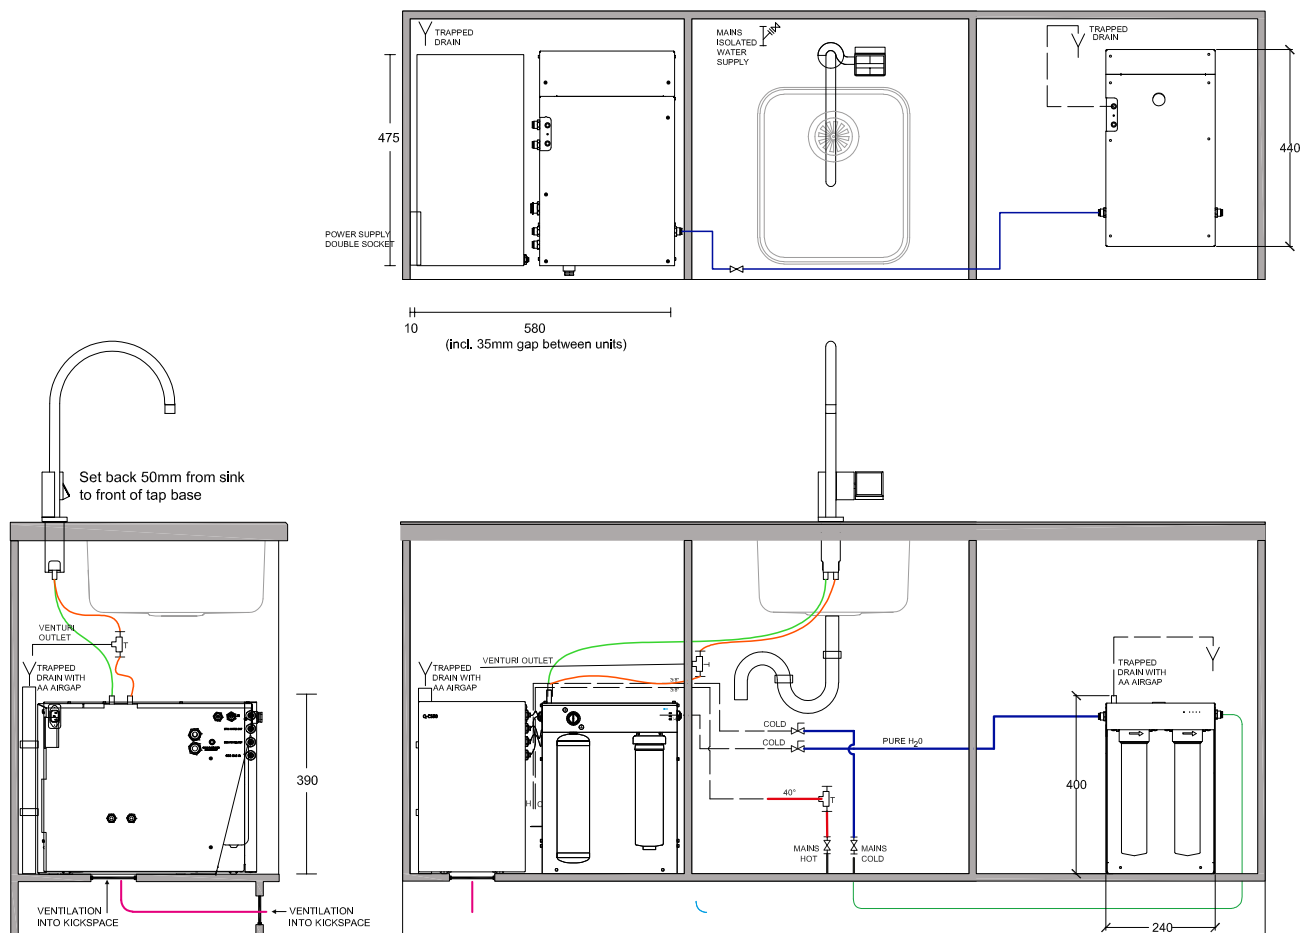

QT-653-B/BC/BCS


—Pre installation check list

FOR ALL UNITS

1. Mains Cold Water: 1/2" lever ball valve, located top front right side wall of cupboard, set back 15 cm from door, 50 cm up from base.
2. Thermostatic Valve to be installed so that it is accessible for adjustment on the same side of the cupboard as the mains cold water supply. Note that this is in addition to the isolated Mains Cold Water that will be used to feed a cold supply to the system.
3. Drainage: Trapped upstand, located back left hand side of cupboard taking care not to sterilise the floor space within cupboard. (N.B. if ordering a drip tray the interconnection will be a 22mm poly pipe.)
4. Power: 2 x Double sockets installed top of the cupboard opposite side to mains water. 653 Infinite boiler unit comes with two power cables.

TYPICAL INSTALLATION


—without Pureh2o PurityPRO undersink purifier

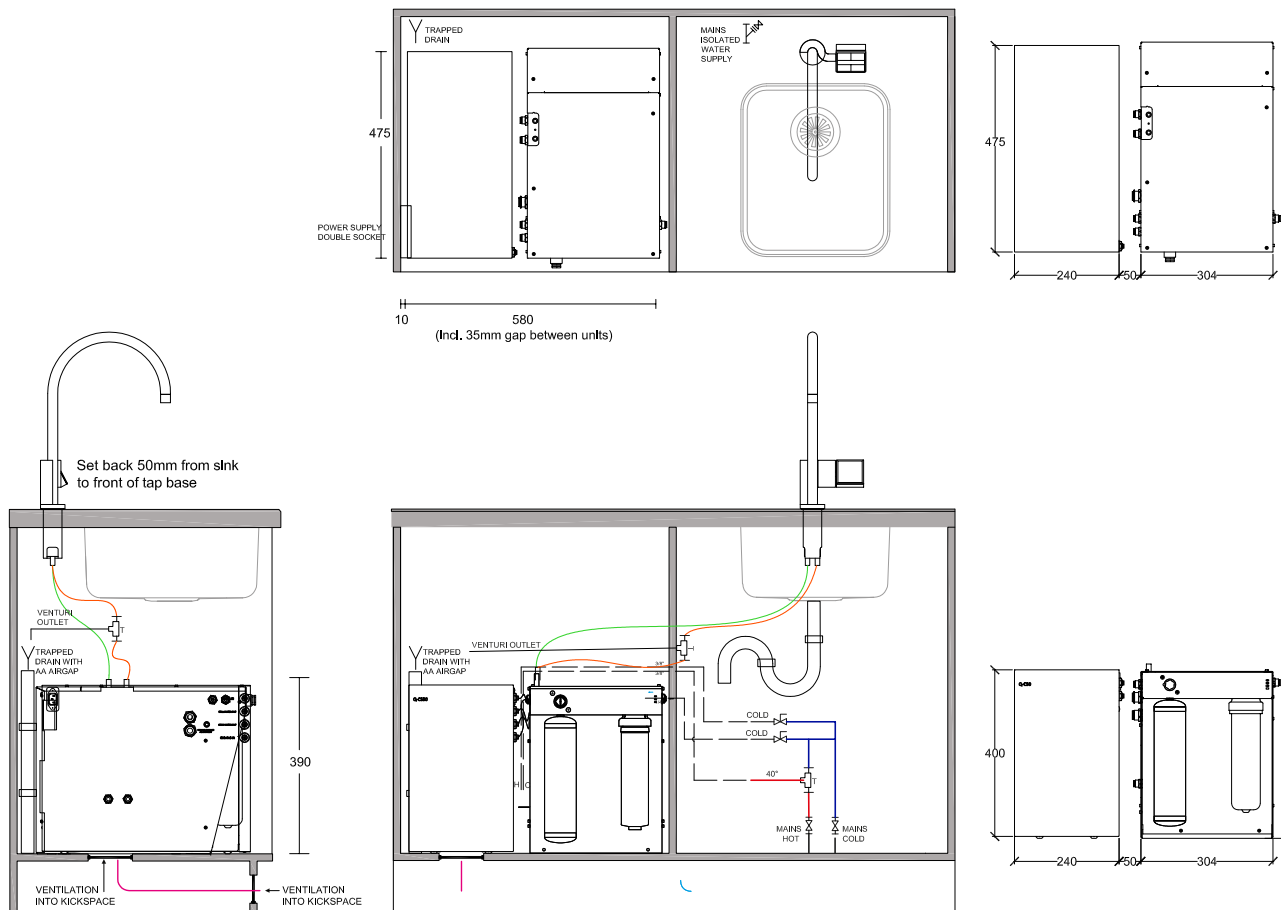

QT-653-B/BC/BCS

—Pre installation check list

VENTILATION DRAWINGS - Kick Board Cutting Template

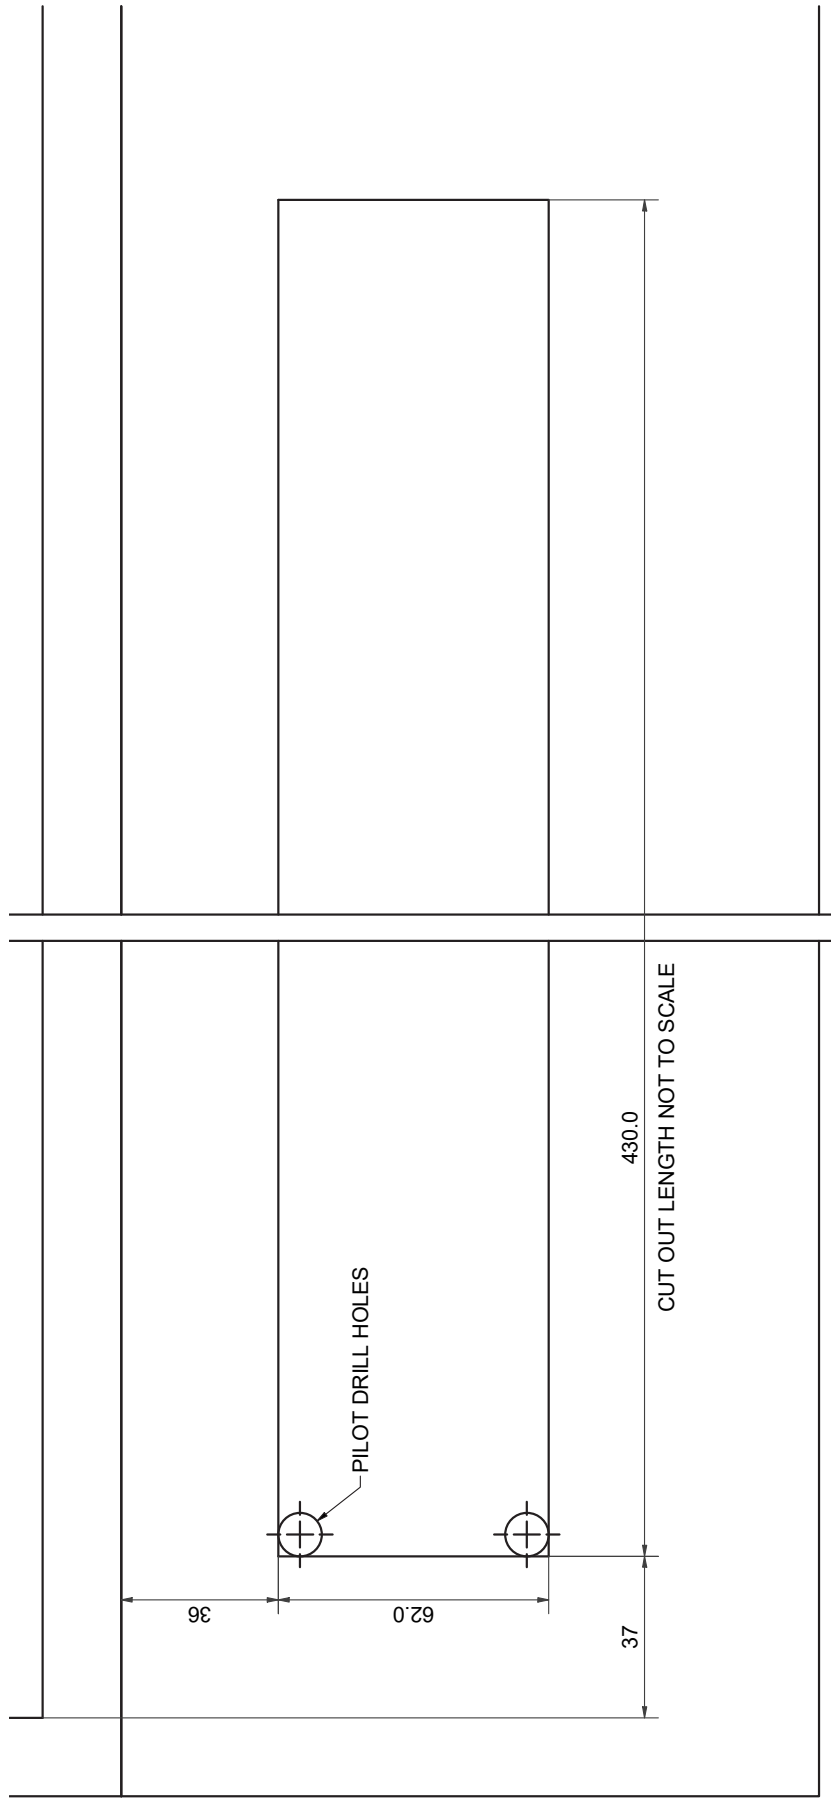

Mark and cut ducting to length if required using the kick board as reference.

Fit grill over the kick board cut out using the screws supplied.

IMPORTANT: Before making any cuts into the cupboard or kick board, ensure the area to be cut is free from water pipes or electrical cables. There is a risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

SCALE - 1:1
PAGE - A3

0mm 150mm


Use for: Q-C20, Q-CS20, Q-C50, Q-CS50

3B7698-01 KICK-BOARD CUTTING TEMPLATE.

QT-653-B/BC/BCS

—Pre installation check list

VENTILATION DRAWINGS - Base Cutting Template

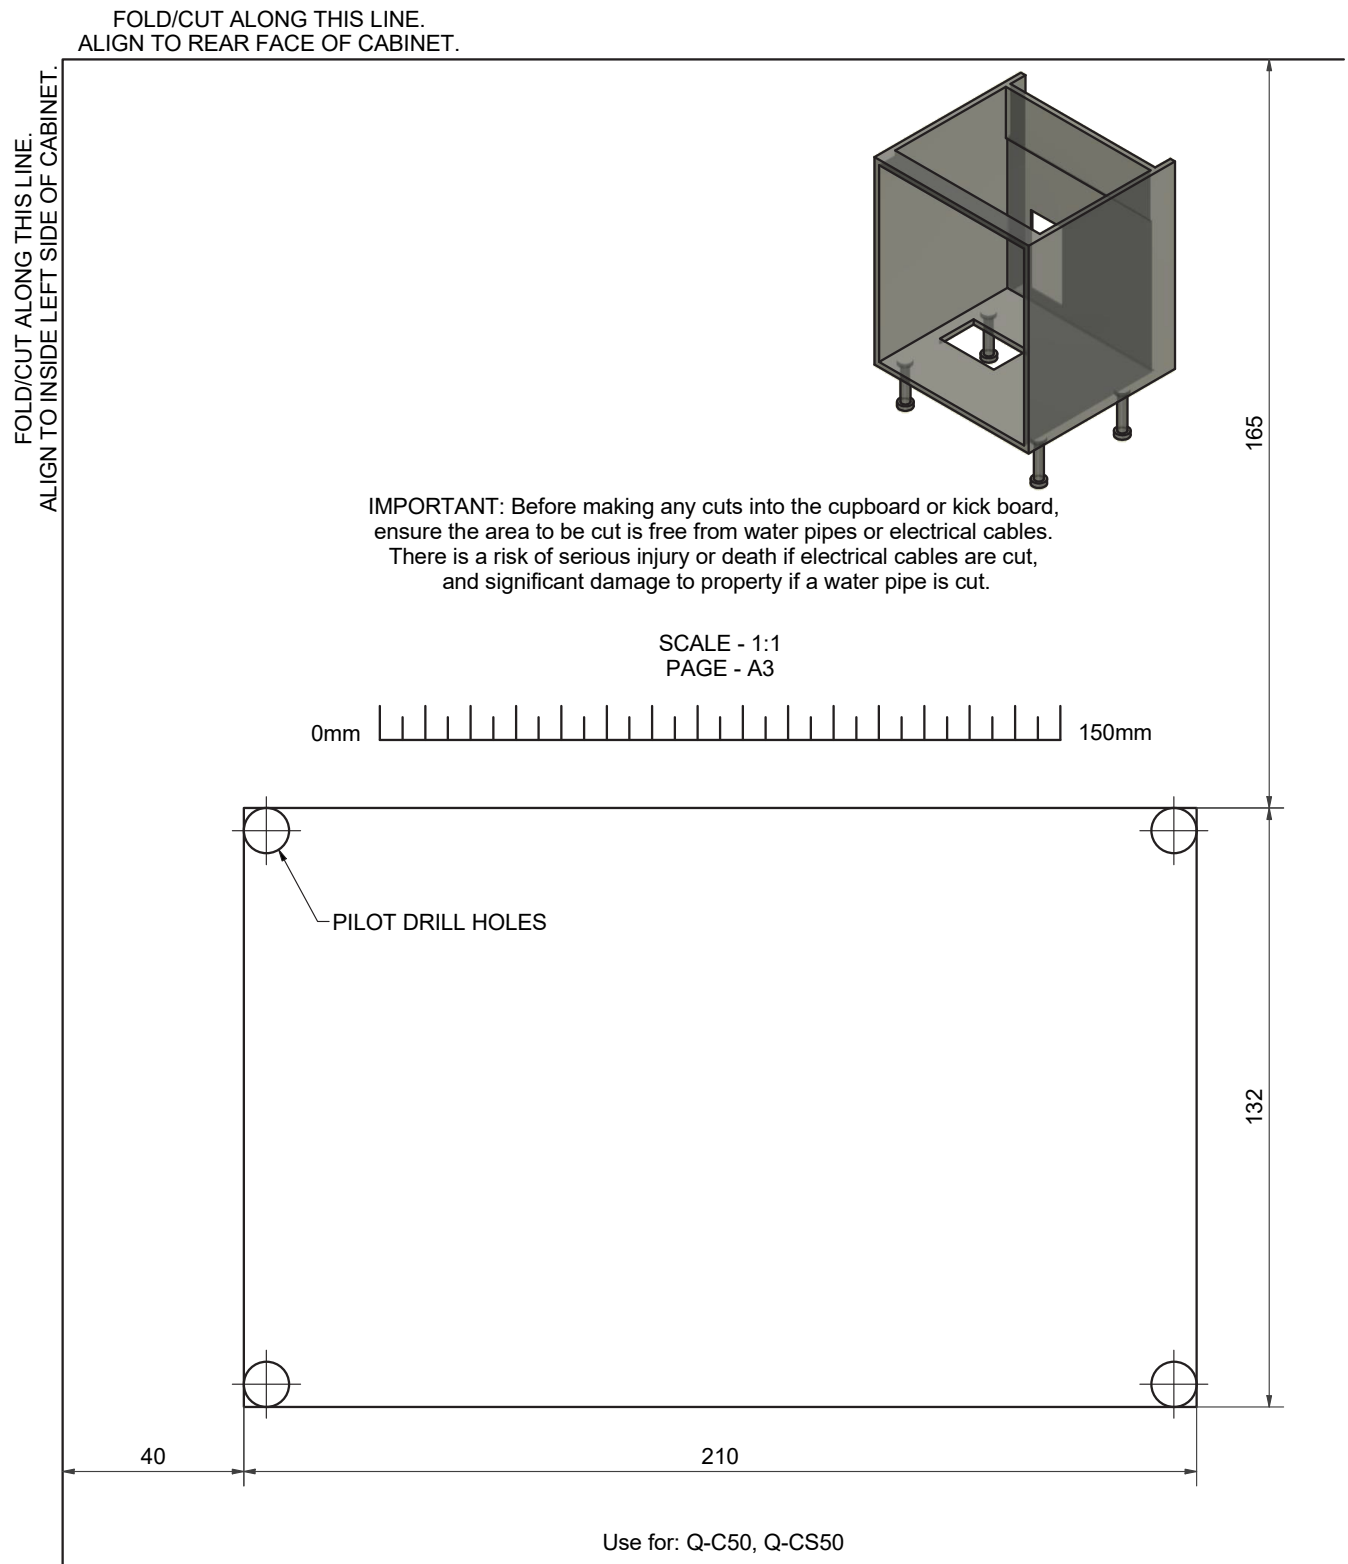

QT-653-B/BC/BCS

—Pre installation check list

quatreau®
Infinite

EXTENSION VENT CABINET DRAWINGS - Cutting Template

- sample only - not reproduced to scale

ALL DIMENSIONS IN mm

TOLERANCES


0.0 ` 0.25, 0.00 ` 0.1

ANGULAR ` 0.25~

BEND ANGLES ` 2~

ALL OTHERS DIMNS ` 0.5

UNLESS OTHERWISE STATED

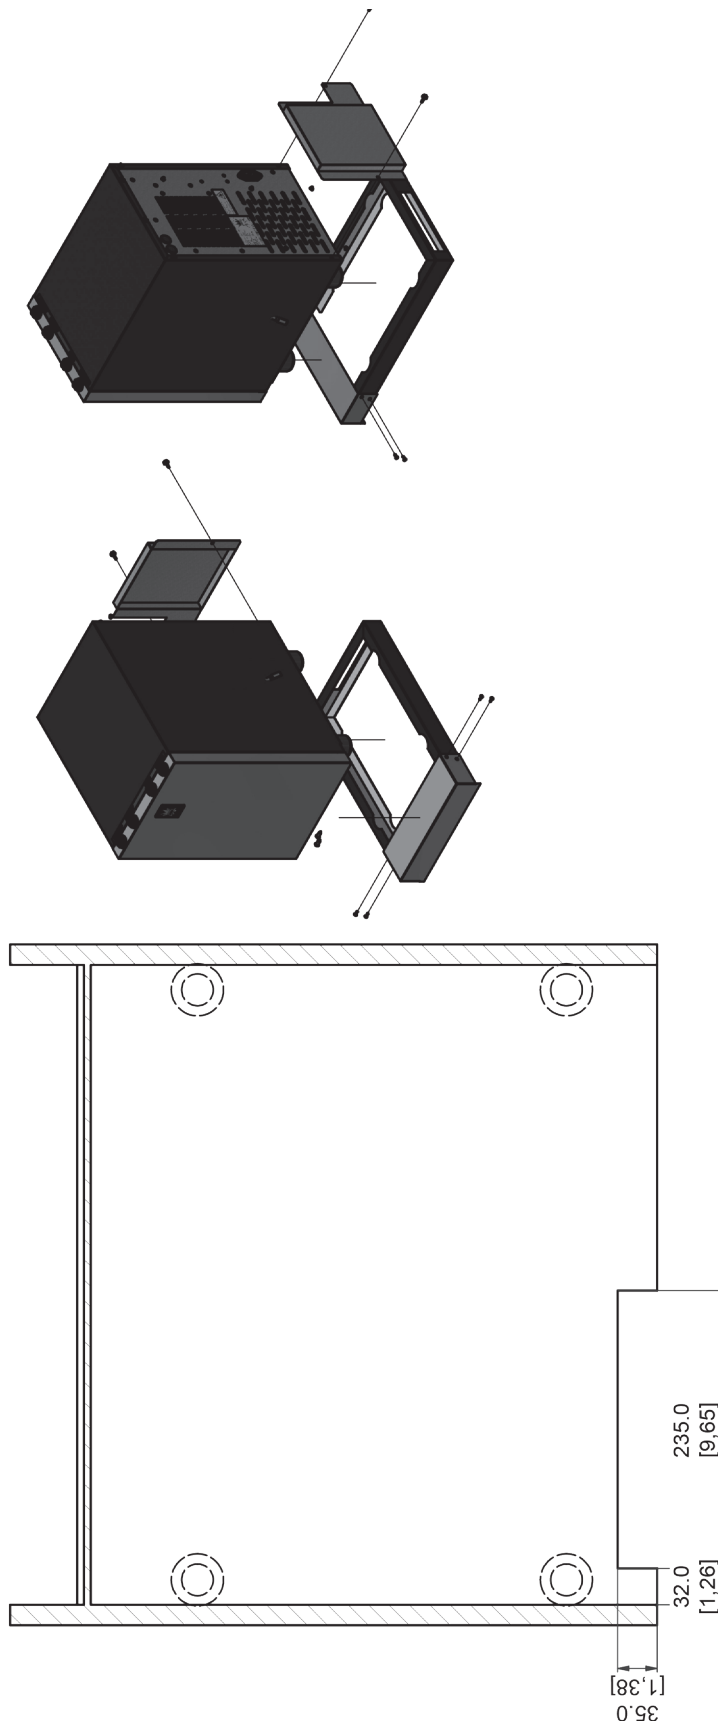


QSTD-553-BCS

the eco-friendly boiling, chilled and sparkling compact drinks station



CUTTING TEMPLATE
3 button drainer template
4 holes 31.0

Scale 1:1

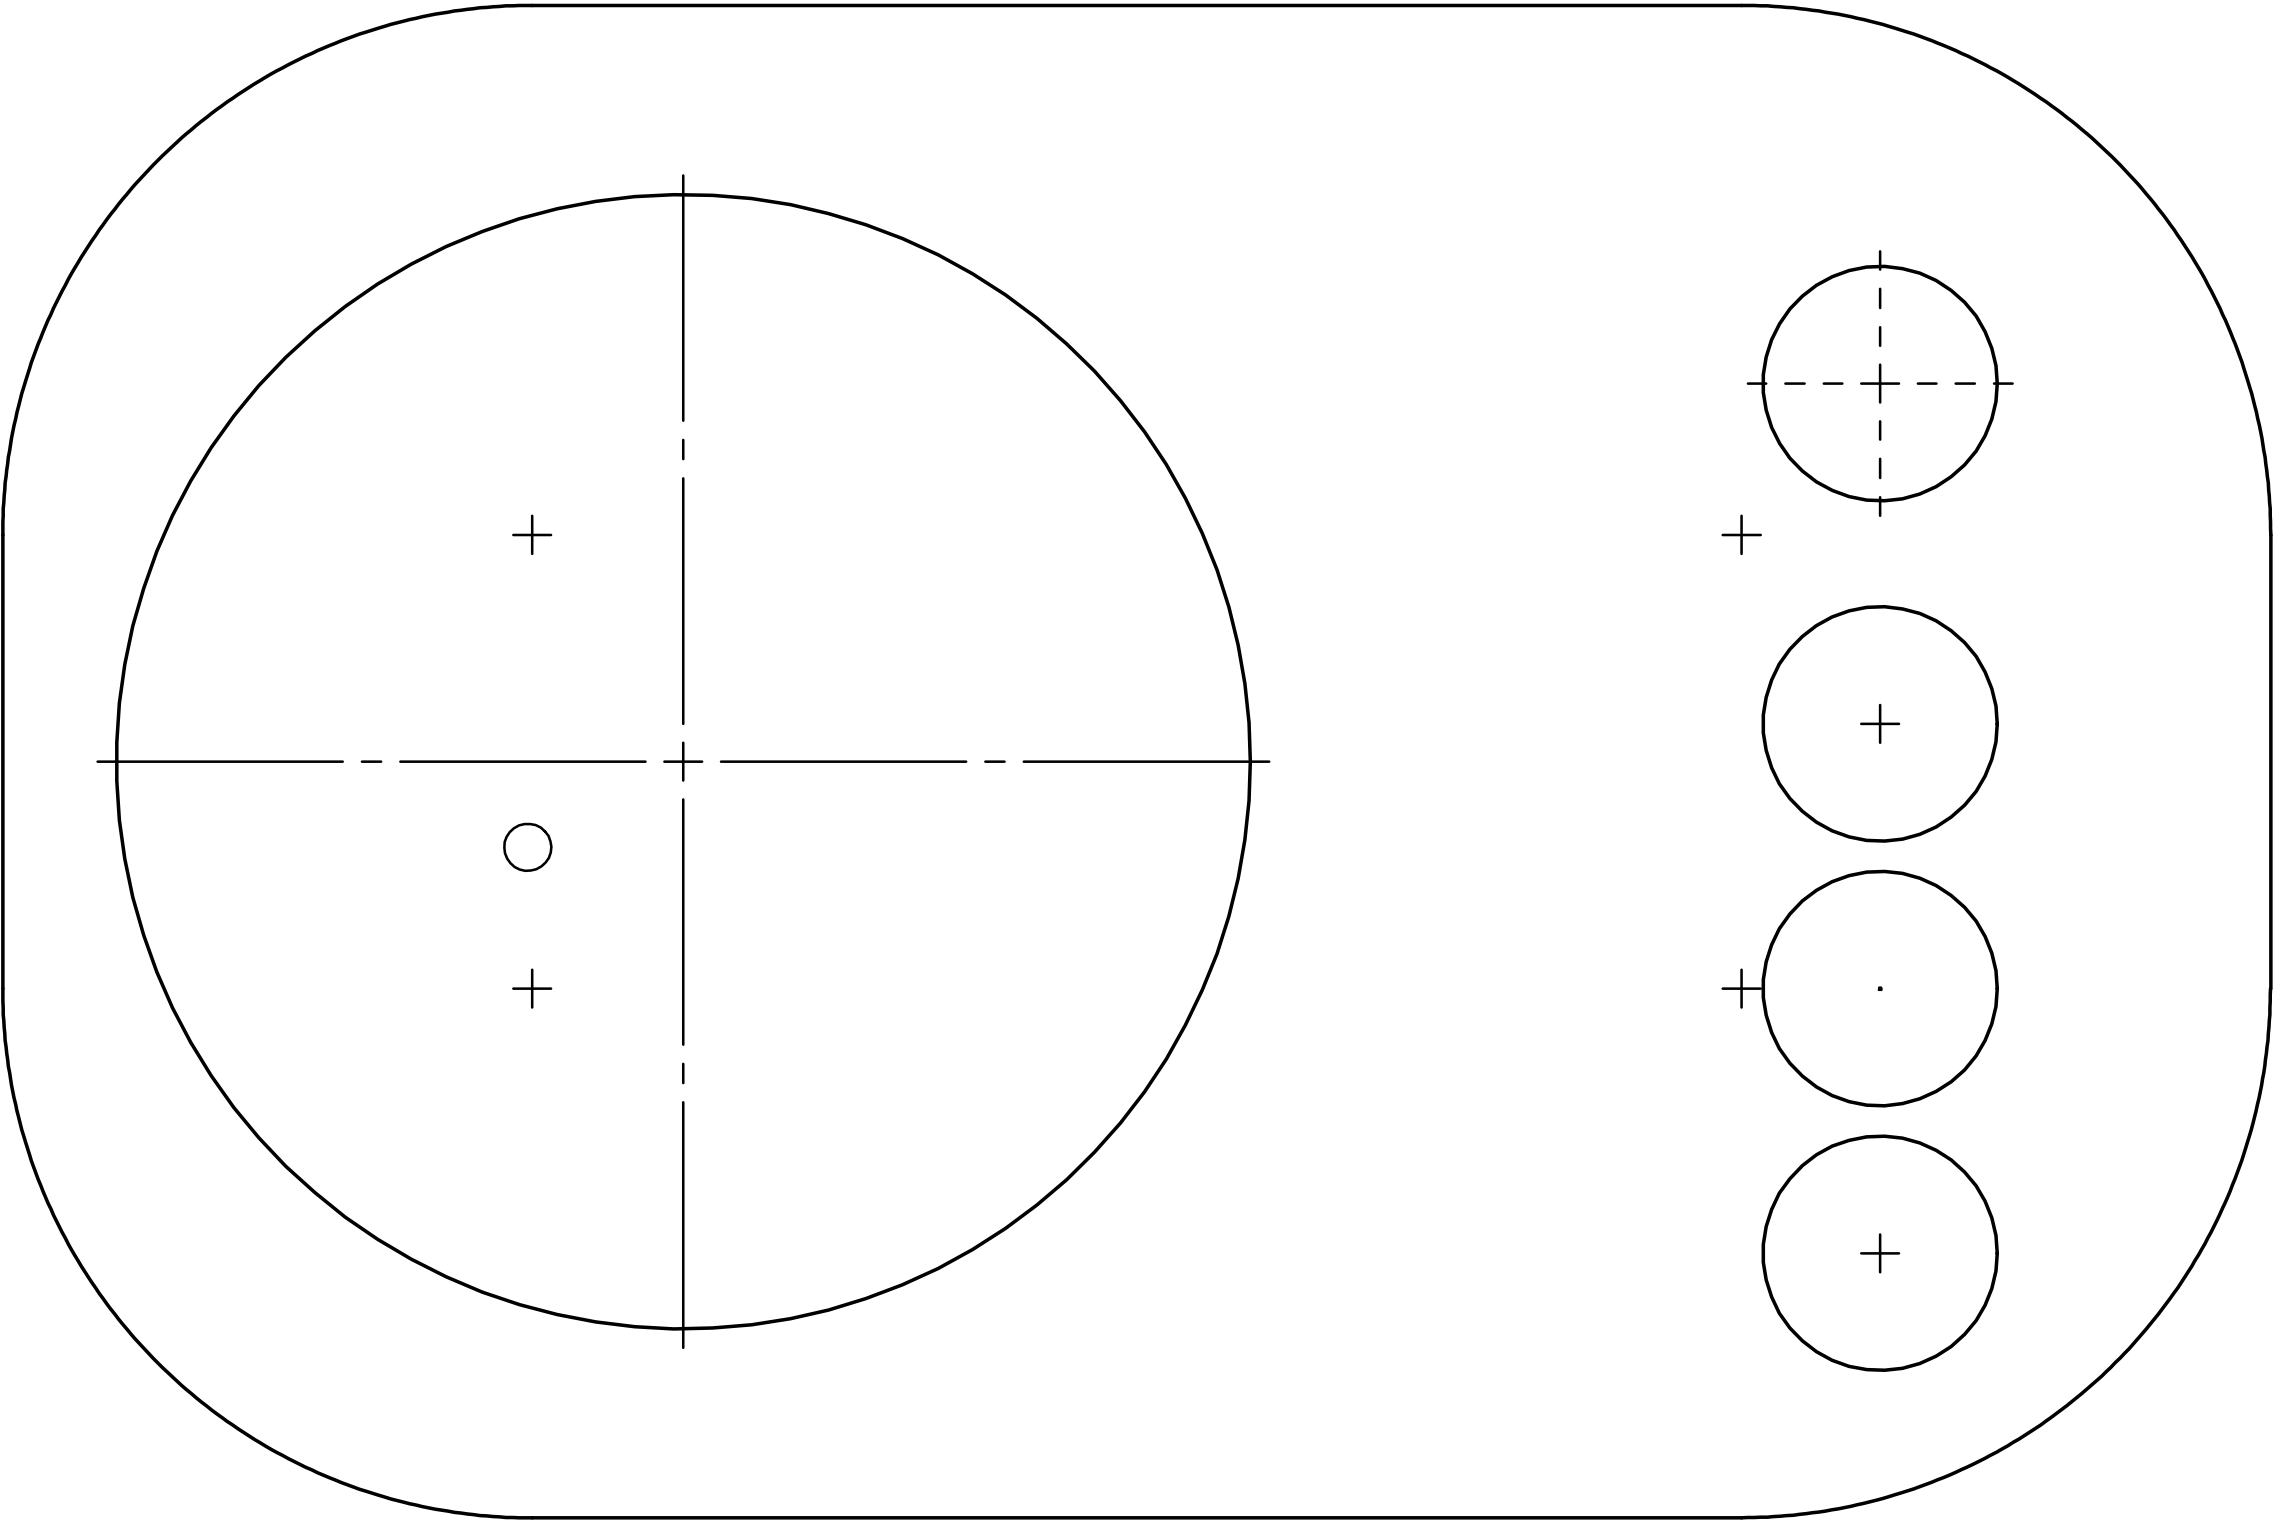

PLEASE NOTE

Place a credit card here to confirm the cutting template printed at 100%.

Print landscape on an A3 sheet.